


OWNER'S MANUAL

Safety, Installation, Maintenance, and Operation

15000 Articulating Crane

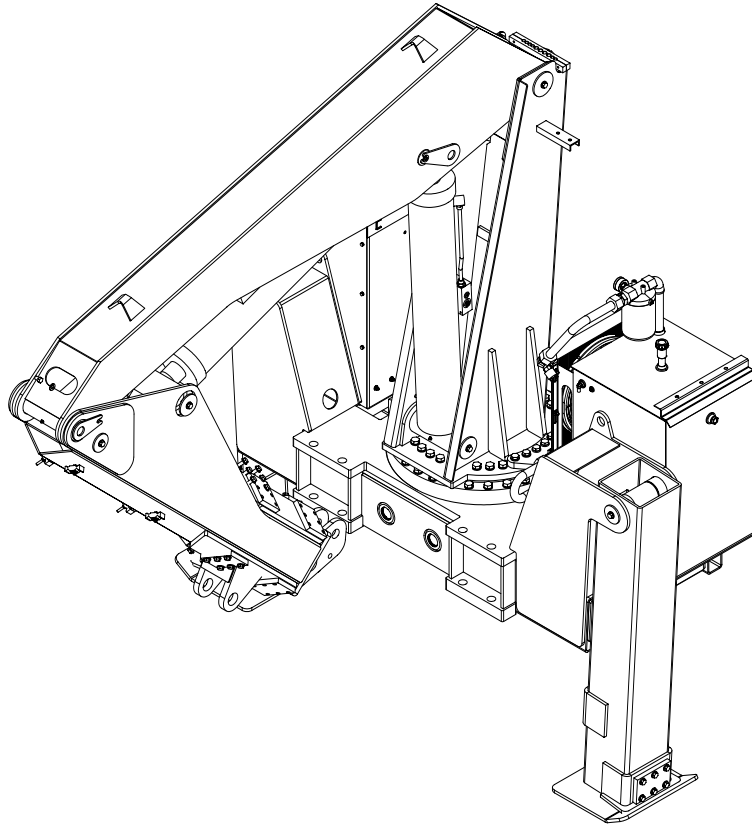

Stellar Industries, Inc.
190 State Street
PO Box 169
Garner, IA 50438
800-321-3741
Fax: 641-923-2811
www.stellarindustries.com

Subject to Change without Notification.
© 2007 Stellar Industries, Inc.

Manual Part No. 37812
Last Revision: 12/14/07

15000 Manual Revisions

Date of Revision	Section Revised	Description of Revision
October 5th, 2007	Hydraulics - Electrical	Updated Hydraulic Kit to reflect engineering changes.

Table of Contents

<i>Introduction</i>ii
Chapter 1 - Safety1
Chapter 2 - Operation3
Unit Operation Overview3
Manual Operation4
Radio Remote Operation4
Hook Precautions5
Crane Transport5
Crane Precautions5
Operator Information6
Chapter 3 - Maintenance7
Lubrication Recommendations9
Wire Rope Maintenance10
Torque Data Chart11
Inspection Checklist11
Daily Inspection12
Monthly Inspection13
Quarterly Inspection14
Annual Inspection16
Inspection Notes17
Chapter 4 - Specifications19
Capacity Chart - Decal PN 685320
Chapter 5 - Decals21
Decals of Note21
Outrigger Decals21
Crane Cover Decals23
Decal Kit Placement Kit 872025
Chapter 6 - Installation27
Installation Overview27
Installation Notice27
General Installation27
Mounting Kit Drawing28
Chapter 7 - Assembly Drawings29
Base Assembly - PN 2029929
Mast Assembly - PN 2030030
Boom Assembly - PN 2060131
Cylinder Assembly - PN 2357532
Pendant Box Assembly - PN 2060233
Reservoir Assembly - PN 1296034
Chapter 8 - Hydraulics - Electrical35
Control Kit - PN 3394336
Hydraulic Kit - PN 3394237
Chapter 9 - Replacement Parts39
Chapter 10 - Troubleshooting41
<i>Warranty Information</i>47

Introduction

Stellar Cranes are designed to provide safe and dependable service for a variety of operations. With proper use and maintenance, these cranes will operate at peak performance for many years.

To promote this longevity, carefully study the information contained in this manual before putting the equipment into service. Though it is not intended to be a training manual for beginners, this manual should provide solid guidelines for the safe and proper usage of the crane.

Once you feel comfortable with the material contained in this manual, strive to exercise your knowledge as you safely operate and maintain the crane. This process is vital to the proper use of the unit.

A few notes on this manual:

A copy of this manual is provided with every crane and shall remain with the crane at all times. Information contained within this manual does not cover all maintenance, operating, or repair instructions pertinent to all possible situations.

Please be aware that some sections of this manual contain information pertaining to

Stellar manufactured cranes in general and may or may not apply to your specific model.

This manual is not binding. Stellar Industries, Inc. reserves the right to change, at any time, any or all of the items, components, and parts deemed necessary for product improvement or commercial/production purposes. This right is kept with no requirement or obligation for immediate mandatory updating of this manual.

In closing:

If more information is required or technical assistance is needed, or if you feel that any part of this manual is unclear or incorrect, please contact the Stellar Customer Service Department by phone at 800-321-3741 or email at service@stellarindustries.com.

ATTENTION
Failure to adhere to the instructions could result in property damage or even serious bodily injury to the operator or others close to the crane.

**For Technical Questions, Information, Parts, or Warranty, Call Toll-Free at
800-321-3741**

Hours: Monday - Friday, 8:00 a.m. - 5:00 p.m. CST

Or email at the following addresses:

Technical Questions, and Information

service@stellarindustries.com

Order Parts

parts@stellarindustries.com

Warranty Information

warranty@stellarindustries.com

Chapter 1 - Safety

Please Read the Following Carefully! This portion of the manual contains information regarding all Stellar manufactured cranes. Some items contained within this chapter may not apply to your specific equipment.

Safety should be the number one thought on every operator's mind. Three factors should exist for safe operation: a qualified operator, well-maintained equipment, and the proper use of this equipment. The following information should be read and understood completely by everyone working with or near the crane before putting the unit into operation.

Please take note that Stellar Industries, Inc. is not liable for accidents incurred by the crane because of non-fulfillment from the operator's side of current rules, laws, and regulations.

GENERAL

It is the responsibility of the owner to instruct the operator in the safe operation of your equipment and to provide the operator with properly maintained equipment.

Trainees or untrained persons shall be under the direct supervision of qualified persons.

Do not operate equipment under the adverse influence of alcohol, drugs, or medication.

PERSONAL SAFETY

Keep clear of all moving parts.

Always wear the prescribed personal safety devices.

Always wear approved accident-prevention clothing such as: protective helmets, anti-slip shoes with steel toes, protective gloves, anti-noise headphones, protective glasses, and reflective jackets with breathing apparatus. Consult your employer regarding current safety regulations and accident-prevention equipment.

Do not wear rings, wristwatch, jewelry, loose-fitting or hanging clothing such as ties, torn garments, scarves, unbuttoned jackets or unzipped overalls, which could get caught up in the moving parts of the crane.

Keep a first-aid box and a fire extinguisher readily available on the truck. Regularly check to make sure the fire extinguisher is fully charged and the first-aid kit is stocked.

Do not use controls and hoses as handholds. These parts move and cannot provide stable support.

Never allow anyone to ride the crane hook or load.

MAINTENANCE SAFETY

Never modify or alter any of the equipment, whether mechanical, electrical, or hydraulic, without explicit approval from Stellar Industries.

Do not perform any maintenance or repair work on the crane unless authorized and trained to do so.

Release system pressure before attempting to make any adjustments or repairs.

Do not attempt service or repair when the PTO is engaged.

Failure to correctly plumb and wire the crane can cause a malfunction and damage to the crane and/or operator.

Decals are considered safety equipment. They must be maintained, as would other safety devices. Do not remove any Decals. Replace any Decals that are missing, damaged, or not legible. The safety instruction plates, notices, load charts and any other sticker applied to the crane or service body must be kept legible and in good condition. If necessary, replace them.

STABILITY

Know the crane components and their capabilities and limitations. Overloading the crane may result in serious injury to self and others, and damage to the equipment and immediate surroundings.

Never exceed manufacturer's load ratings. These ratings are based on the machine's hydraulic, mechanical, and structural design rather than stability.

The supporting surface under the service truck must be able to support the weight of the machine and its load. Use outrigger pads if necessary.

Park the vehicle on level ground and extend the outriggers fully out and then down.

Keep feet and legs clear when lowering outrigger jacks.

Never operate the crane without making sure the outriggers are positioned on stable, flat ground.

Set the parking brake and disengage the drive axle before attempting a lift.

LOAD SAFETY

Operate the crane in compliance with the load capacity chart at all times. Know the weight of the load being lifted. Do not rely on the overload device to determine maximum rated loads.

Never use a sling bar or anything larger than the hook throat that could prevent the hook latch from closing. This would negate the safety feature.

Do not apply side loads to the booms.
Do not leave a crane load suspended or unattended.

Do not walk under suspended loads.

Do not position any load over a person nor should any person be permitted to place him or herself under a load.

Do not use the boom or the winch to drag a load.

Do not use the crane boom to push downward onto anything.

ELECTROCUTION

Allow extra space for swaying power lines in windy conditions.

Keep a minimum of ten feet between any portion of the crane and an electrical line. Add an additional 12" for every additional 30,000 Volts or less.

Remember - Death or serious injury can occur when working near power lines or during electrical storms.

Use a signal person when operating near electrical sources.


ENVIRONMENT

Do not operate the crane during electrical storms.

In extreme cold, allow adequate time to warm the truck before engaging the PTO. Do not rev the truck engine and over speed the hydraulic pumps as permanent damage to the pumps may occur. Follow the vehicle owner's manual regarding operating the vehicle in such adverse conditions.

In dusty work areas, every effort must be taken to keep dust and sand out of the moving parts of the machinery.

In high humidity work areas, keep parts as dry as possible and well lubricated.

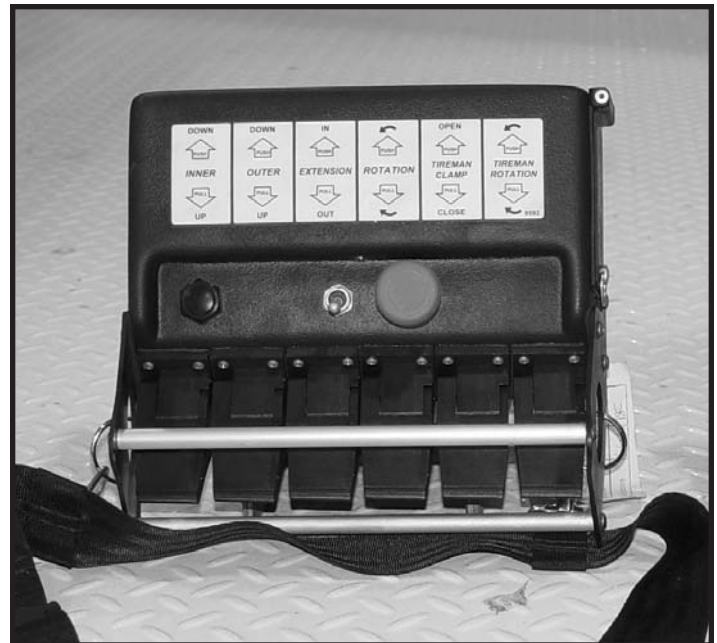

Crane Controls

1. Be familiar with the sequence and operation of the crane controls.
2. Each individual crane function should have control function decals. Replace them immediately if they are missing or illegible.
3. Keep hands, feet and control levers free from mud, grease and oil.
4. Be familiar with the remote control and how it operates before attempting to lift a load.
5. Be prepared before beginning operation of the crane:
 - All protective guards must be in place.
 - Be aware of the surroundings: low branches, power lines, unstable ground.
 - Be sure all safety devices provided are in place and in good operating condition.
 - Be prepared for all situations. Keep fire extinguisher and first aid kit near.
 - Be sure all regular maintenance has been performed.
 - Visually inspect all aspects of the crane for physical damage.
 - Check for fluid leaks.
 - Make sure the outriggers are down and stable.

ATTENTION

Stellar Industries, Inc. is not liable for accidents incurred by the crane because of the operator's non-fulfillment of current rules, laws and regulations

Chapter 2 - Operation

This chapter contains information regarding the operation of Stellar manufactured articulating cranes. Please study the following pages to ensure your familiarity with the operation process. This understanding is vital to the safe and efficient operation of the crane.

Job-Site Set-Up

Thoroughly plan the lift before positioning the vehicle. Consider the following:

1. The vehicle should be positioned in an area free from overhead obstructions to eliminate the need for repositioning.
2. Position the vehicle so that it is impossible for any portion of the equipment to come within the minimum required safe distance of any power line. Maintain a clearance of at least 10 feet between any part of the crane, load line, or load, and any electrical line or apparatus carrying up to 50,000 volts. One foot additional clearance is required for every additional 30,000 volts or less. Remember to allow for winds that cause power lines to sway. It is recommended that a signal person be used when the vehicle is set-up near power lines.
3. The vehicle should also be positioned on a firm and level surface that will provide adequate support for the outrigger loading. Use extreme caution when setting up near overhanging banks or excavations.
4. The parking brake must be set on the vehicle and the drive axle disengaged before performing a crane operation.
5. The outriggers must be extended to stabilize the truck before beginning operation.

NOTICE

The parking brake must be fully engaged in order to operate any Stellar Equipment.

Unit Operation Overview

1. Engage the PTO
2. Turn on Power to Crane
3. Position Outriggers
4. Operate Crane
5. Store Outriggers
6. Turn Off Power to Crane
7. Disengage the PTO

1. Engage the PTO

- A. Engage the **parking brake**.
- B. Place the transmission in the Neutral position.
- C. Make certain the PTO switch is in the 'off' position.
- D. Start the vehicle engine.
- E. Depress the clutch on manual transmission vehicles.
- F. Engage the PTO switch for cable and air type shifters. Turn on the dash switch for electrical operated style. Consult vehicle owner's manual for location and operation of OEM style in-dash PTO switch.
- G. Slowly release the clutch on a manual transmission vehicle.
- H. Allow a few moments to warm the hydraulic system oil. In cold weather, it is especially important to let the system run for a few minutes before operating.



PTO Switch

2. Turn on Power to Crane

Activate power to the crane and outriggers. The power switch is located on the control panel in the vehicle cab.

3. Position Outriggers

Once the PTO is engaged, extend the outriggers using the control levers or switches marked 'outrigger'. These may be located on the crane base or in the compartment under the crane.

4. Operate Crane

- A. Turn on necessary power to the crane.
- B. Activate toggle switch for desired crane function.
- D. Activate the variable speed trigger to control the desired function.
- E. When operation is complete, store remote handle in a safe, dry location.

5. Store Outriggers

Retract outriggers using the control levers or switches marked 'outrigger'.

6. Turn Off Power to Crane

Deactivate power to crane and outriggers.

7. Disengage the PTO

- A. On manual transmission vehicles, depress the clutch pedal completely.
- B. Disengage the PTO switch.
- C. If vehicle is a manual transmission, release the clutch pedal gradually.

Radio Remote Operation



The crane is operated by a radio control system which operates an electronic valve bank. The controller (as shown above) operates the following functions:

- Main Boom Up and Down
- Outer Boom Up and Down
- Extension Boom In and Out
- Rotation Clockwise and Counter-Clockwise
- TireMan Clockwise and Counter-Clockwise
- TireMan Open and Close

To operate the crane, activate the desired toggle switch. The crane will not function until the trigger on the remote handle is activated. The crane speed will change as the trigger is pulled or released.

Note: If the crane does not operate, check the batteries located in the remote handle and replace if necessary.


Note About Battery Condition

The batteries included with this equipment may be rechargeable. To keep rechargeable batteries in optimal working condition, follow these simple guidelines:

1. Keep battery away from moisture. Store in a cool, dry location.
2. Do not store or carry battery so that metal objects can contact exposed metal end. Keep battery cap on when not in use.
3. The batteries should be recharged when they fail to produce sufficient power.
4. Never attempt to open the battery for any reason.

Manual Operation

In case of radio failure, the crane can be operated using manual overrides located on the valve bank.

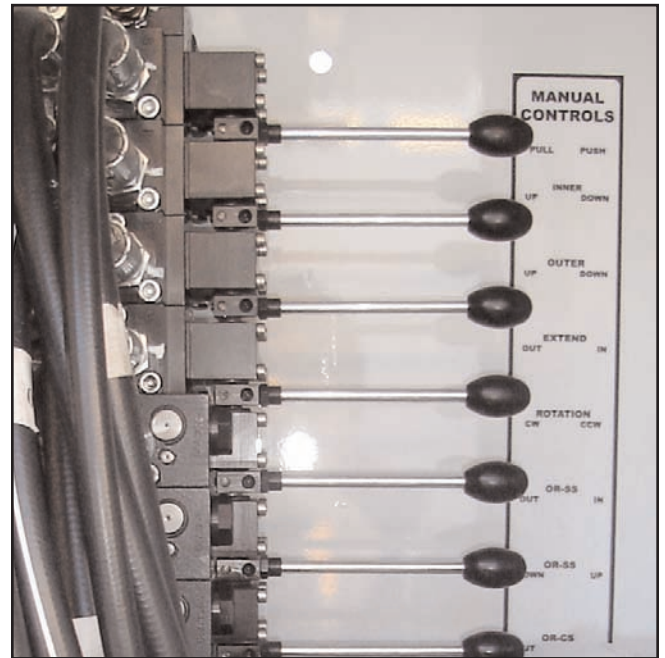

Valve Manual Override Operation

- 1. Switch to Manual Operation:**
Flip the toggle switch (shown below) up to "Manual"
- 2. Operate Levers on the Valve Bank:**
Push or pull levers to operate listed function.
- 3. Switch Controls Off:**
Flip the toggle switch to the middle "Off" position.
- 4. Have Unit Serviced.**



Crane Precautions

1. Movement of the control levers should be slow and smooth to meter oil flow for safe operation. Avoid jerky and sudden movements.
2. The crane controls should be clearly marked with decals. If these are missing or illegible, replace immediately. (See Chapter 5: Decals)
3. Lift load slightly off the ground to check the safety of the cargo. Do not use stability to determine the safety. Consult the capacity charts and strictly adhere to them.
4. Be constantly aware of the boom position when operating the controls.
5. The boom tip should be centered directly over the load before making the lift to avoid swinging.
6. Do not drag loads with the crane.
7. Do not attempt to lift fixed loads.
8. Do not load boom in a sideways direction.
9. Know the weight of the rigging and load to avoid overloading the crane.
10. Do not extend or rotate a load over anyone.
11. Wear protective gear such as hard hat, safety glasses, steel-toed boots, and gloves.

Crane Transport

Before transporting the crane, do the following:

1. The crane must be in the stored position.
2. Outriggers must be securely stowed and not extended horizontally or vertically.
3. Hook and sheave assemblies must be securely fastened to prevent swinging.
4. All loose accessories, tools, and remote controls must be securely stored in their respective compartments or fasteners.
5. The PTO must be disengaged.
6. The parking brake must not be released until all of the above procedures are completed.
7. Do not drive the carrier vehicle while a load is present on the hook.
8. Do not drive the carrier vehicle with less than proper tire inflation.
9. Do not drive the carrier vehicle in areas where the vertical clearance is unknown.
10. Do not allow personnel to ride on the equipment during transport.

Hook Precautions

1. Hooks are designed and manufactured to lift specific loads. The specified rated load of a hook applies to loads held uniformly in direct tension and does not take into account shock loads, hook tip loading, side loading, bending, torsional, or related loads.
2. Do not attempt to lift a load that is larger than the load rating of the hook.
3. Never use a hook's yield point as an indicator of its capacity.
4. Do not use a hook to lift personnel.
5. Know the rated load of the hook in use.
6. Never weld attachments to a finished hook in field applications. This will alter and destroy the design properties of the hook material.
7. Keep fingers, hands, body, and loose clothing from between the hook and the load.
8. Avoid shock loading.
9. Inspect the hook regularly for excessive wear and maintain it in safe operating condition.



The crane **MUST** be in the stored position before transporting.

Operator Information

OPERATOR REQUIREMENTS

- 1. Operation is limited to the following people:**
 - A. Designated individual.
 - B. Trainees under direct supervision of the designated individual.
 - C. Test or maintenance individual.
 - D. Crane Inspector.

- 2. Operators must meet the following physical qualifications:**
 - A. Vision of at least 20/30 Snellen in one eye and 20/50 in the other, with or without corrective lenses.
 - B. Ability to distinguish colors if color differentiation is required.
 - C. Adequate hearing, with or without a hearing aid.
 - D. No physical or emotional defects that may create a hazard to the operator or others.
 - E. Normal depth perception and coordination.

- 3. In addition to the physical qualifications, Operators must:**
 - A. Demonstrate the ability to understand all decals, the owner's manual, and any other information required for safe operation of the crane.
 - B. Be able to demonstrate the ability to safely control the crane.
 - C. Know all safety regulations.
 - D. Be responsible for maintenance requirements.
 - E. Understand and be fully capable of implementing all emergency procedures.
 - F. Understand the operating procedures as outlined by this manual, ANSI B30.2, and Federal/State Laws.

OPERATOR CONDUCT

1. Operators will not engage in any operation that would cause them to divert attention away from the operation of the crane.
2. Operators are responsible for all operations under their direct control.
3. Operators will not leave a suspended load unattended.
4. Operators will be familiar with the equipment and the maintenance required for proper care.

HANDLING THE LOAD

- 1. Size of the load:**
 - A. Do not load the crane beyond the rated capacity.
 - B. It is the responsibility of the operator to know the weight of the handled load.

- 2. Attaching the load:**
 - A. Attach the load to the hook by means of slings or other approved devices.
 - B. Do not wrap the hoist rope around the load.

- 3. Moving the load:**
 - A. Make certain that the crane is level and properly blocked.
 - B. Ensure that the load is secure and balanced within the sling before moving it.
 - C. Be sure that the crane is stable before moving the load. Use stabilizer pads to ensure the proper distribution of weight.
 - D. Do not drag the load sideways.
 - E. Make sure the hook is brought over the load to minimize swinging.
 - F. No suspended load should pass over a person.
 - G. Avoid sudden starts and stops when moving a load.

Chapter 3 - Maintenance

WARNING - Read the Following before performing any maintenance on the crane.

1. Only authorized service personnel are to perform maintenance on the crane.
2. Disengage the PTO before any service or repair is performed.
3. Do not disconnect hydraulic hoses while there is still pressure in those components.
4. Before disconnecting hydraulic components, place the boom on the ground or have it supported, shut off the engine, release any air pressure on the hydraulic reservoir, and move pedals and control levers repeatedly through their operating positions to relieve all pressures.
5. Keep the crane and service body clean and free from grease build-up, oil and dirt to prevent slippery conditions.
6. Perform all safety and maintenance checks before each period of use.
7. Replace parts with Stellar Industries, Inc. approved parts only.
8. Immediately repair or have repaired any components found to be inadequate.

Maintenance Procedures

1. Position the crane where it will be out of the way of other operations or vehicles in the area.
2. Be sure boom is lowered to the ground or otherwise secured from dropping.
3. Place all controls in the off position and secure operating features from inadvertent motion.
4. Disconnect power source.
5. Relieve hydraulic oil pressure from all hydraulic circuits before loosening or removing hydraulic components.
6. Label or tag parts when disassembling.

Daily Inspection

Daily Inspection should occur each day before the crane is put into use. Each day, inspect the crane for all of the following:

1. Hydraulic oil level.
2. Loose parts or damage to structures or weld.
3. Cylinder movement due to leakage.
4. Hoses and gearboxes for evidence of oil leaks.
5. Controls, including hand throttle for malfunction or adjustment.
6. Truck hand brake operation.
7. All securing hardware such as cotter pins, snap rings, hairpins, and pin keepers for proper installation.
8. All safety covers for proper installation.
9. Cylinder holding valves for proper operation.
10. Wire rope for broken wires, extensive wear, distortion, and heat damage.

Periodic Inspection

Periodic Inspection should occur while the crane is in use. For the duration of the usage, inspect the crane for all of the following:

1. Loose bolts and fasteners.
2. All pins, bearings, shafts, and gears for wear, cracks, or distortion to include all pivots, outriggers, sheave pins, and bearings.
3. Hydraulic systems for proper operating pressure.
4. Main frame mount bolts.
5. Cylinders for:
 - A. Damaged rods.
 - B. Dented barrels.
 - C. Drift from oil leaking internally.
 - D. Leaks at rod seals or holding valves.
6. PTO drive line system for proper alignment, lubrication, and tightness.
7. Hydraulic hose and tubing for evidence of damage such as blistering, crushing, or abrasion.

Weekly Inspection

Weekly Inspection should occur at the beginning of every work week. Each week, inspect the crane for all of the following:

1. Lubrication of points required by lubrication chart located in this chapter.
2. Proper operation of load hook safety latch.
3. Presence of this owner's manual.

Monthly Inspection

Monthly Inspection should occur at the beginning of every work month. Each month, inspect the crane for all of the following:

1. Frame bolt tightness - turn barrel nuts and mounting bolts during the first month of operation on new machines and then quarterly thereafter.
2. Cylinders and valves for leaks.
3. Lubrication.
4. Load hook for cracks or having more than 15 percent normal throat opening or 10 degrees twist.
5. Structural members for bends, cracks, or broken members.
6. All welds for breaks and cracks.
7. All pins and keepers for proper installation.
8. All control, safety, and capacity placards for readability and secure attachment.
9. Inspect all electrical wires and connections for worn, cut, or deteriorated insulation and bare wire. Replace or repair wires as required.
10. Tightness of all boom wear, pad-retaining bolts.

Cleanliness

An important item in preserving the long life of the crane is keeping dirt, grime, and corrosive material out of the working parts. Thoroughly wash the crane periodically.

Service

The following general suggestions should be helpful in analyzing and servicing your crane. Using the following systematic approach should be helpful in finding and fixing problems:

1. Determine the problem.
2. List and record possible causes.
3. Devise checks.
4. Conduct checks in a logical order to determine the cause.
5. Consider the remaining service life of components against the cost of parts and labor necessary to replace them.
6. Make the necessary repair.
7. Recheck to ensure that nothing has been overlooked.
8. Functionally test the new part in its system.

Inspection Checklist

For a more detailed outline of scheduled inspection points, refer to the Stellar Inspection Checklist at the end of this chapter. This list is an excellent guide for the inspection tasks that will help maintain the quality of your Stellar product. Feel free to photocopy the checklist as needed.

ATTENTION

Every six (6) months, remove the hydraulic pump from the PTO and lubricate the splines using Chelsea Lubricant #379831 or Stellar PN 20885. Failure to lubricate shaft splines will cause damage to the PTO and Hydraulic pump.

Lubrication Recommendations

Component	Location	Recommendation
Engine	Crankcase	Apply Manufacturer's Recommendations
Hydraulic System Below -5°F -5°F to 90°F Above 90°F	Reservoir	Petro-Canada Arctic MV 15 (ISO 22) Petro-Canada HYDREX 32 (ISO 32) Petro-Canada HYDREX 46 (ISO 46)
Open Gears	Hand	Precision XL3 Moly EP 2 (NLGI 2 grease with moly)
Bearings, grease (including turntable bearing inner race)	Gun	Precision XL EP 2 (NLGI 2)
Worm Drive Gearbox	Gearbox	Precision Synthetic EP 00 (NLGI 00)
Planetary Gearbox (including winch)	Gearbox	Traxon Synthetic 75W-90 (API GL-5)
Wear Pad Lubrication	Spray	Gearshield NC
Compressor Fluids		
Reciprocating Single Stage Reciprocating Double Stage	Crankcase Crankcase	Compro 100 (ISO 100) Compro 100 (ISO 100)
Screw -15°F to 86°F -23°F to 100°F 32°F to 113°F	Crankcase	Compro XL-S 32 (ISO 32) Compro XL-S 46 (ISO46) Compro XL-S 68 (ISO68)

Greasing the Crane

Lubricate all grease gun points with
Extreme Pressure Grease - Stellar P/N: 22059.

Holding Valve Inspection Procedure

The cylinders are equipped with holding valves that prevent sudden movement of the cylinder rods in the event of a hydraulic hose or hydraulic component failure. The valve is checked in the following manner:


1. Identify the cylinder in question.
2. Identify the holding valves and the cylinder direction in question.
 - a. Cylinder Extend.
 - b. Cylinder Retract.
3. Place the machine so that the cylinder will be located in the appropriate testing position.
4. Pick the load (Do not exceed capacity, rated or stability).
5. Disengage hydraulics.
6. Operate crane functions.
 - A. If the cylinder creeps (lowering the load), replace the holding valve.
 - B. If the cylinder does not creep (load stays suspended), the valve is operational.

Gear-Bearing Bolt Maintenance

Anytime a gear-bearing bolt is removed, it must be replaced with a new bolt of the identical grade and size. Once a bolt has been torqued to 75% of its proof load and then removed, the torque coefficient may no longer be the same as when the bolt was new thus giving indeterminate damp loads after torquing.

Warning!
Failure to replace gear-bearing bolts may result in bolt failure due to metal fatigue causing serious injury or even death.

Torque Data Chart

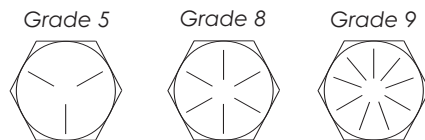

Size (DIA-TPI)	Bolt DIA (Inches)	Plain (Ft-Lb)	Plated (Ft-Lb)	Plain (Ft-Lb)	Plated (Ft-Lb)	Plated (Ft-Lb)
5/16-18	0.3125	17	13	25	18	22
3/8-16	0.3750	31	23	44	33	39
7/16-14	0.4375	49	37	70	52	63
1/2-13	0.5000	75	57	105	80	96
9/16-12	0.5625	110	82	155	115	139
5/8-11	0.6250	150	115	220	160	192
3/4-10	0.7500	265	200	375	280	340
7/8-9	0.8750	395	295	605	455	549
1-8	1.000	590	445	910	680	823
1 1/8-7	1.1250	795	595	1290	965	1167
1 1/4-7	1.2500	1120	840	1815	1360	1646
1 3/8-6	1.3750	1470	110	2380	1780	2158
1 1/2-6	1.500	1950	1460	3160	2370	2865

When using the torque data in the charts above, the following rules should be observed.

1. Bolt manufacturer's particular specifications should be consulted when provided.
2. Flat washers of equal strength must be used.
3. All torque measurements are given in foot-pounds. To convert to inch-pounds, multiply by 12.
4. Torque values specified are for bolts with residual oils or no special lubricants applied. If special lubricants of high stress ability, such as Never-Seez compound graphite and oil, molybdenum disulphite, colloidal copper or white lead are applied, multiply the torque values in the charts by the factor .90. The use of Loctite does not affect the torque values listed above.
5. Torque values for socket-head capscrews are the same as for Grade 8 capscrews.

Inspection Checklist

Use of this checklist is subject to terms of the Stellar Warranty information. Additional copies of this checklist can be obtained by contacting Stellar Customer Service at (800) 321-3741.

Type of Inspection (check one)

- Daily (if deficiency found) Quarterly
 Monthly Annual

Owner/Company:

Contact Person:

Crane Make/Model:

Crane Serial:

Date Inspected:

Hour Meter Reading:

Inspected by: (print)

Signature of Inspector:

Type of Inspection Information

Daily and monthly inspections are to be performed by a "designated" person, who has been selected by the employer or the employer's representative as being competent to perform specific duties.

Quarterly and annual inspections are to be performed by a "qualified" person who, by possession of a recognized degree in an applicable field or certificate of professional standing, or who, by extensive knowledge, training and experience has successfully demonstrated the ability to solve or resolve problems related to the subject matter and work.

One hour of normal crane operation assumes 20 complete cycles per hour. If operation exceeds 20 cycles per hour, inspection frequency should be increased accordingly.

Consult the Stellar Owner's Manual for additional inspection items.

Before inspecting and operating the crane, make certain that the crane is set up away from power lines and leveled with outriggers fully extended.

Daily (D): Before each day of operation, those items with a (D) must be inspected. This inspection need not be recorded unless a deficiency is found.

Monthly (M): Monthly inspections or 100 hours of normal operation (which ever comes first) includes all daily and monthly inspection items plus items designated with a (Q). This inspection must be recorded.

Quarterly (Q): Every three months or 300 hours of normal operation (which ever comes first) includes all daily and monthly inspection items plus items designated with an (M). This inspection must be recorded.

Annual (A): Each year or 1200 hours of normal operation (which ever comes first) includes all items on this form which encompasses daily, monthly, and quarterly inspections plus those items designated by (A). this inspection must be recorded.

Monthly Inspection

Frequency	Key	Inspection Description	Status
M	Daily	All Daily Inspections.	
M	Cylinders	Visual inspection of cylinders for leakage at rod, fittings, & welds. Damage to rod & case.	
M	Valves	Holding valves for proper operation.	
M	Valves	Control valve for leaks at fittings & between sections.	
M	Valves	Control valve linkages for wear, smoothness of operation & tightness of fasteners. Relief valve for proper pressure settings.	
M	General	Bent, broken or significantly rusted/corroded parts.	
M	Electrical	Electrical systems for presence of dirt, moisture & frayed wires.	
M	Structure	All structural members for damage.	
M	Welds	All welds for breaks & cracks.	
M	Pins	All pins for proper installation & condition.	
M	Hardware	All bolts, fasteners & retaining rings for tightness, wear & corrosion.	
M	Wear Pads	Condition of wear pads.	
M	Pump & Motor	Hydraulic pumps & motors for leakage at fittings, seals & between sections. Check tightness of mounting bolts.	
M	PTO	Transmission/PTO for leakage, abnormal vibration & noise, alignment & mounting bolt torque.	
M	Hyd Fluid	Quality of hydraulic fluid and for presence of water.	
M	Hyd Lines	Hoses & tubes for leakage, abrasion damage, blistering, cracking, deterioration, fitting leakage, & secured properly.	
M	Hook	Load hook for abnormal throat distance, twist, wear, & cracks.	
M	Rope	Condition of load line.	
M	Manual	Presence of operator's manuals with the unit.	
M	Chassis	Tire wear and air pressure.	
M	Chassis	Working backup alarm.	
M	Station	Fire extinguisher at cab or machinery housing.	

Quarterly Inspection

Frequency	Key	Inspection Description	Status
Q	Daily	All daily inspections.	
Q	Monthly	All monthly inspections.	
Q	Rotation Sys	Rotation bearing for proper torque of all mounting bolts.	
Q	Hardware	Base mounting bolts for proper torque.	
Q	Structure	All structural members for deformation, cracks, & corrosion.	
		Base	
		Outrigger beams & legs	
		Mast	
		Inner boom	
		Outer boom	
		Extension(s)	
		Jib boom	
		Jib extension(s)	
		Other	
		Other	
Q	Hardware	Pins, bearings, shafts, gears, rollers, & locking devices for wear, cracks, corrosion, & distortion.	
		Inner boom pivot pin(s) & retainer(s)	
		Outer boom pivot pin(s) & retainer(s)	
		Inner boom cylinder pin(s) & retainer(s)	
		Outer boom cylinder pin(s) & retainer(s)	
		Extension cylinder pin(s) & retainer(s)	
		Jib boom pin(s) & retainer(s)	
		Jib cylinder pin(s) & retainer(s)	
		Jib extension cylinder pin(s) & retainer(s)	
		Boom tip attachments	
		Other	
		Other	

Quarterly Inspection Continued...

Frequency	Key	Inspection Description	Status
Q	Hyd Lines	Hoses, fittings, & tubing for proper routing, leakage, blistering, deformation, & excessive abrasion.	
		Pressure line(s) from pump to control valve	
		Return line(s) from control valve to reservoir	
		Suction line(s) from reservoir to pump	
		Pressure line(s) from control valve to each function	
		Load holding valve pipe(s) and hose(s)	
		Other	
Q	Pumps&Motors	Pumps and motors for loose bolts/fasteners, leaks, noise, vibration, loss of performance, heating and excess pressure.	
		Winch motor(s)	
		Rotation motor(s)	
		Other	
Q	Valves	Hydraulic valves for cracks, spool return to neutral, sticking spools, relief valve failure.	
		Main control valve	
		Load holding valve(s)	
		Outrigger or auxiliary control valve(s)	
		Other	
Q	Cylinders	Hydraulic cylinders for drifting & leakage. Rods for nicks, scores, & dents. Castor damage. Case & rod ends for damage & abnormal wear.	
		Outrigger cylinder(s)	
		Inner boom cylinder(s)	
		Outer boom cylinder(s)	
		Extension cylinder(s)	
		Rotation cylinder(s)	
		Jib lift cylinder(s)	
		Jib extension cylinder(s)	
		Other	
Q	Winch	Winch, sheaves, & drums for damage, abnormal wear, abrasion, & other irregularities.	
Q	Hyd Filter	Hydraulic filters for replacement per maintenance schedule.	


Chapter 4 - Specifications

Model 15000 Crane SPECIFICATION SHEET

Crane Rating:	150,000 ft-lbs (20.72 ton-meters)
Standard Boom Length: (From CL of Crane)	13' 2" (4.01 m)
Boom Extension:	Hydraulic 37" (93.98 cm)
Maximum Horizontal Reach: (From CL of Crane)	16' 3" (4.95 m)
Maximum Vertical Lift: (From Truck Frame)	22' (6.71 m)
Boom Elevation:	-5 to +80 degrees
Cylinder Specifications	
Inner Lift Cylinder:	6" (15.2 cm) bore with integral pilot operated counterbalance valves.
Outer Lift Cylinder:	6" (15.2 cm) bore with integral pilot operated counterbalance valves.
Extension Cylinder:	3 1/2 (8.9 cm) bore with integral pilot operated counterbalance valves.
Rotation: (worm gear with pinion)	320 degree power
Lifting Capacities: (From CL of Truck)	15,000 lbs @ 10' (6,804 kg @ 3.05 m) 11,250 lbs @ 13' 2" (5,103 kg @ 4.01 m) 9,000 lbs @ 16' 6" (4,082 kg @ 4.95 m)
Power Supply Required: (PTO & Pump)	16 gpm @ 4200 psi (60.8 lpm @ 290 bar)
Controls:	25' cord with hand held control.
Stowed Height: (Above Truck Frame)	92" (233.68 cm)
Mounting Space Required:	34" (86.39 cm)
Approximate Shipping Weight:	5,800 lbs (2,631 kg)

Capacity Chart - Decal PN 6853

CAPACITY CHART

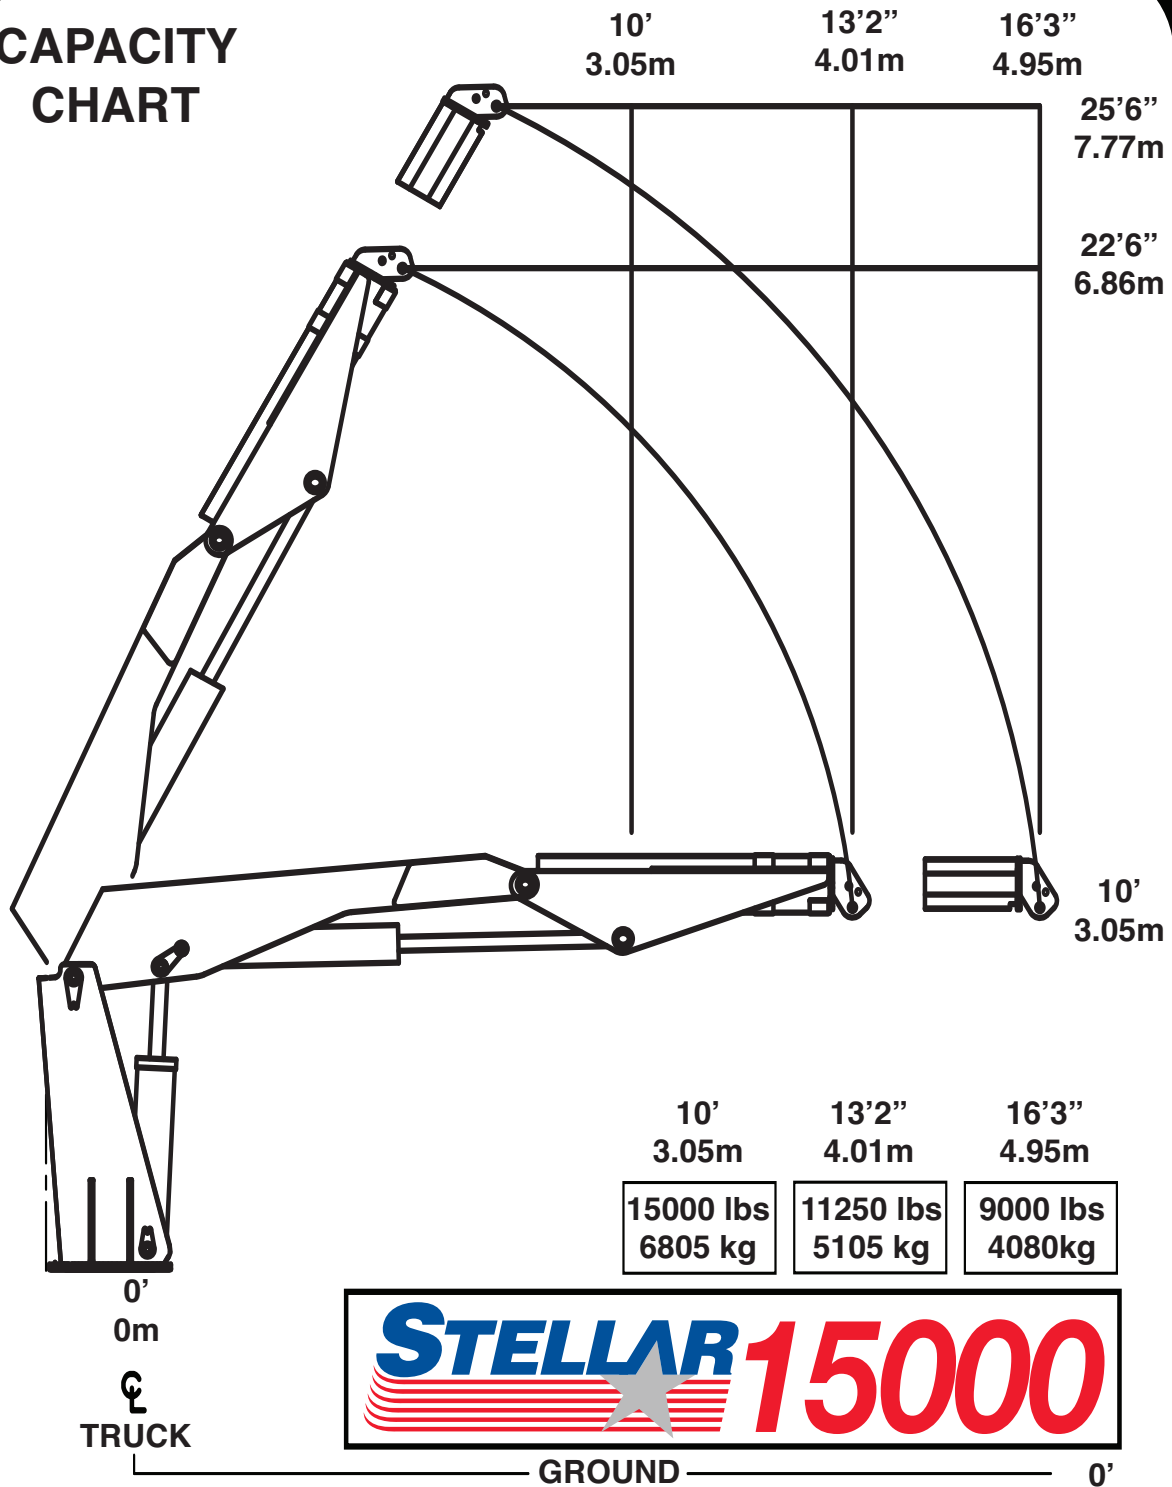


190 STATE STREET GARNER, IA 50438
 PHONE: (800) 321-3741 FAX: (641) 923-2812

6853

Chapter 5 - Decals

Decals of Note

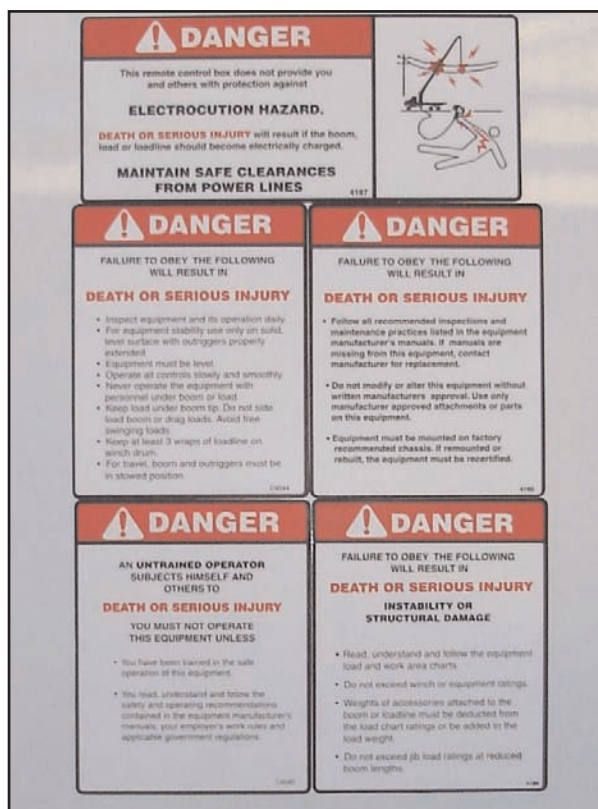


Crane Compartment Cover Decals



Crane Outrigger Decals

Outrigger Decals

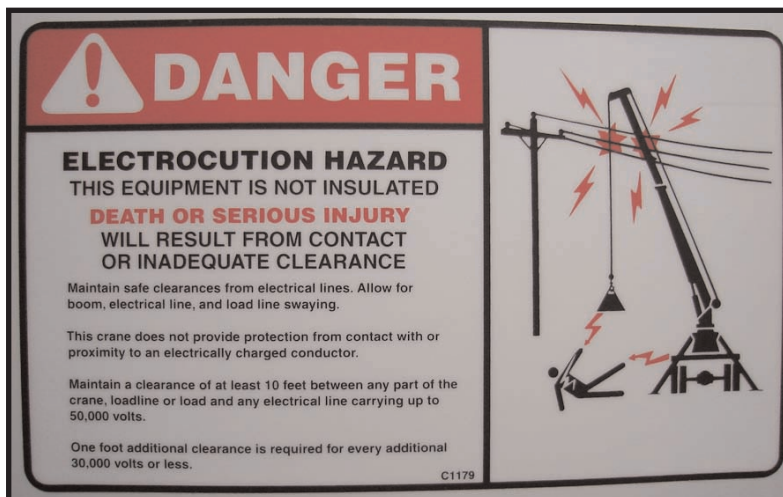

Electrocution Hazard Decal

Location: Crane Base

Function: To inform the operator and other personnel in the work area of the hazard associated with contact or proximity to electrical lines, the possible consequences should the hazard occur and how to avoid the hazard.

PN: C1179

Outrigger Decals continued...




Foot Crushing Hazard Decal

Location: Outrigger Leg

Function: To inform the operator and other personnel in the work area of the hazard associated with the operation of the outriggers, the possible consequences should the hazard occur, and how to avoid the hazard.

PN: C4795

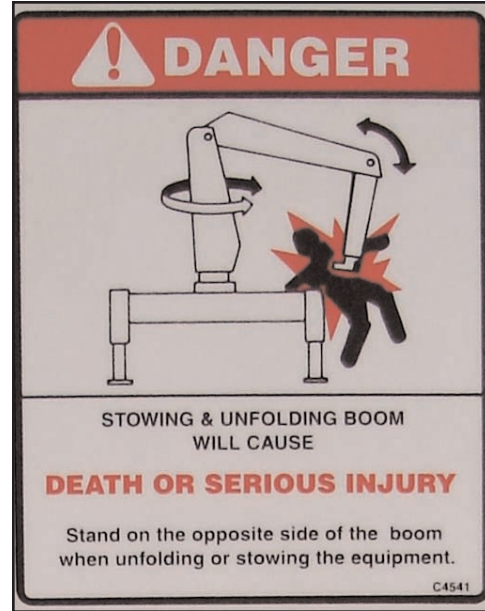


Moving Boom Hazard Decal

Location: Crane Base

Function: To inform the operator and other personnel in the work area of the hazard associated with a moving boom, especially while stowing and unfolding the crane, the possible consequences should the hazard occur, and how to avoid the hazard.

PN: C4541

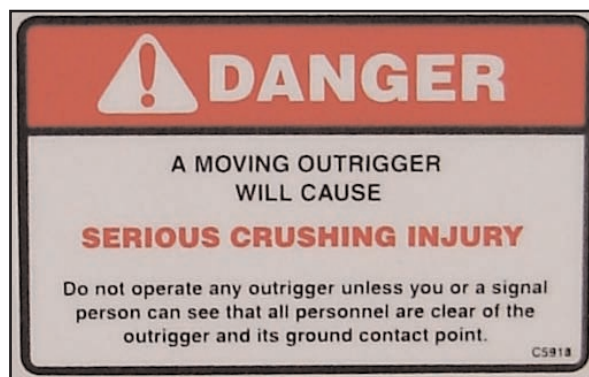


Moving Outrigger Hazard Decal

Location: Outrigger Leg

Function: To inform the operator of the hazard associated with outrigger operation, the possible consequences should the hazard occur, and how to avoid the hazard.

PN: C5918

Crane Cover Decals

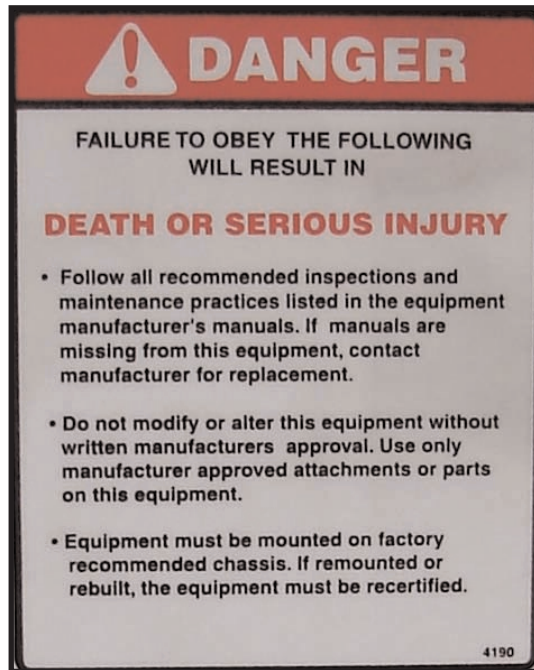

Operation Hazard Decal

Location: Crane Cover


Function: To inform the operator and other personnel in the work area of the hazard associated with improper maintenance and unauthorized modifications, the possible consequences should the hazard occur, and how to avoid the hazard.
PN: 4190



Operation Hazard Decal

Location: Crane Cover

Function: To inform the operator of the need for proper training, familiarity with safe operating procedures and , the possible consequences without training.
PN: C4540

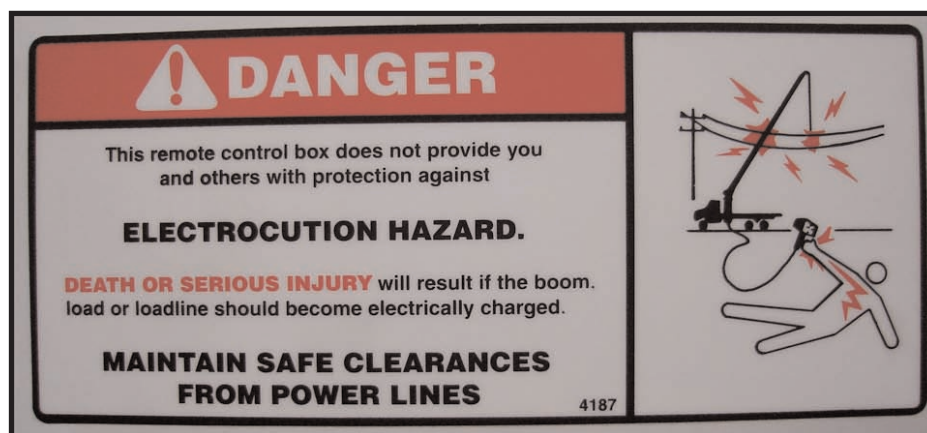


Electrocution Hazard Decal

Location: Crane Cover

Function: To inform the operator and other personnel in the work area of the hazard associated with contact or proximity to electrical lines, the possible consequences should the hazard occur and how to avoid the hazard.
PN: 4187

Crane Cover Decals Continued...

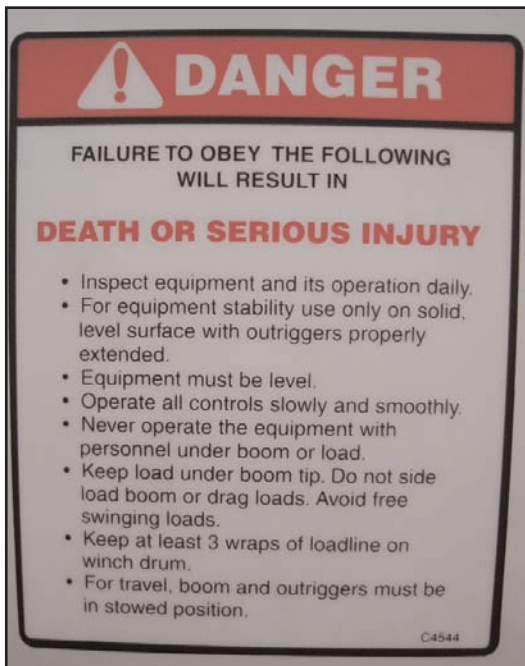


Operation Hazard Decal

Location: Crane Base

Function: To inform the operator of the need for proper training, familiarity with safe operating procedures, and the possible consequences of operation without training.

PN: C4544

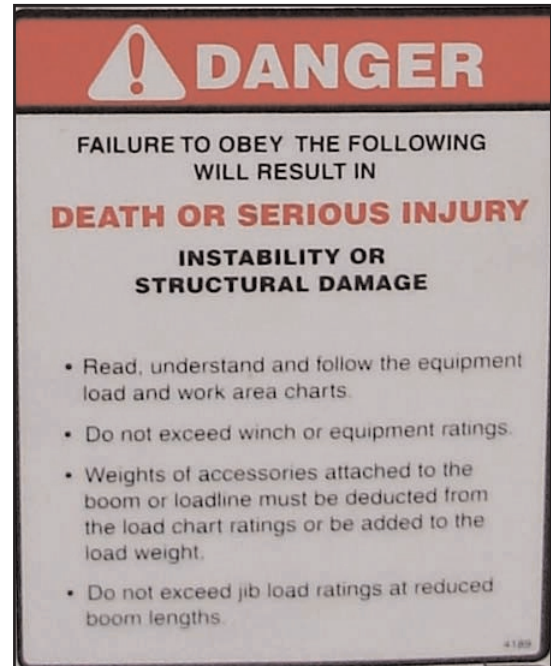


Operation Hazard Decal

Location: Crane Base

Function: To inform the operator of the hazard associated with overloading the crane, the possible consequences should the hazard occur, and how to avoid the hazard.

PN: 4189

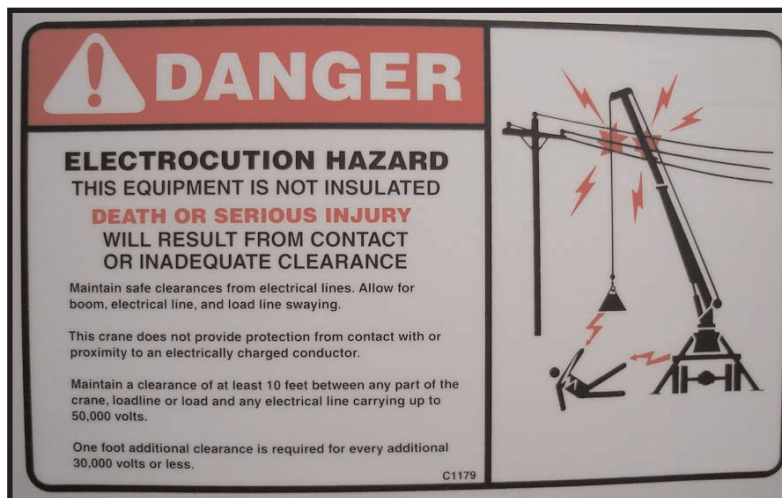



Electrocution Hazard Decal

Location: Crane Base


Function: To inform the operator and other personnel in the work area of the hazard associated with contact or proximity to electrical lines, the possible consequences should the hazard occur and how to avoid the hazard.

PN: C1179

Decal Kit Placement Kit 8720

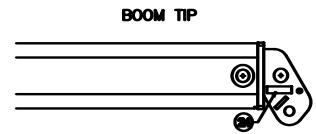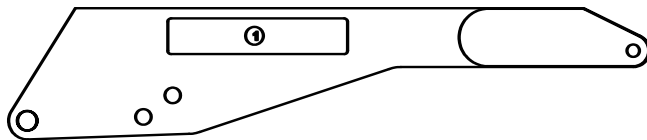

PN 8720

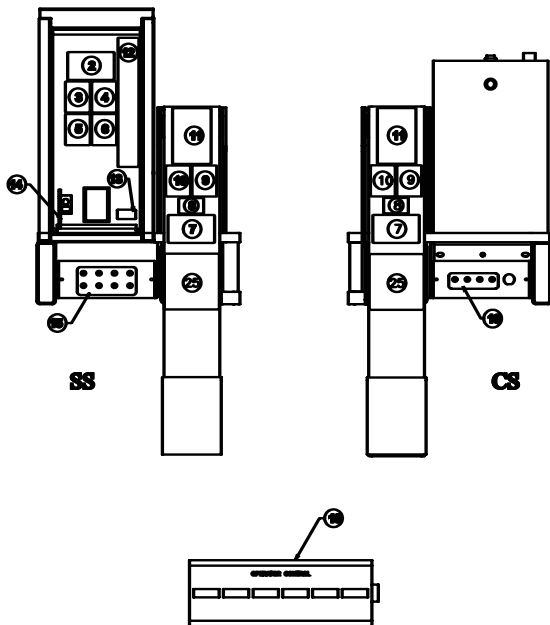

THESE DECALS NOT SHOWN
(USE WITH BODY PACKAGE)

28	8614	DECAL-IDENTIFICATION TM6120	2ref
27	8610	DECAL-CAPACITY TM6120	2ref
26	12925	DECAL-TM6120 RATED LOAD	2ref
25	16732	DECAL TIRE MAN OVERLOAD POSITION	2
24	16973	DECAL-STELLAR APPROVED ATTACHMT	2
23	C5910	DECAL-STELLAR LOGO 1.50X2.00	1
22	C5911	DECAL-STELLAR LOGO 2.00X4.50	3
21	C0568	DECAL-DIESEL FUEL ONLY	2
20	4305	DECAL-FLOOD LIGHTS	1
19	C4545	DECAL-DANGER ELECTROCUTION	4
18	16657	DECAL-CONTROL HANDLE	1
17			
16	8717	DECAL-PANEL CS	1
15	8718	DECAL-PANEL SS	1
14	9593	DECAL-MANUAL REMOTE SWITCH	1
13	4214	DECAL-SERVICE	1
12	25154	DECAL-VALVE BANK CTRL	1
11	6853	DECAL-CAPACITY	2
10	C4795	DECAL-DANGER FOOT	2
09	C4541	DECAL-WARNING	2
08	C5918	DECAL-CAUTION STAND CLEAR	2
07	C1179	DECAL-DANGER ELECTROCUTION HORTL	2
06	4190	DECAL-DANGER OPERATION CONDITION	1
05	C4544	DECAL-DANGER	1
04	4189	DECAL-DANGER OPERATION RESTRICTION	1
03	C4540	DECAL-DANGER	1
02	4187	DECAL-ELECTROCUTION 3.25x7.5	1
01	8613	DECAL-INDENTIFICATION	2
ITEM	PART No.	DESCRIPTION	QTY

Chapter 6 - Installation

Notice: Read this Page Before Installation of the Crane

General Installation

This chapter is designed to serve as a general guide for the installation of a Stellar 15000 Articulating Crane on a Stellar Service Body. Each installation is considered unique so certain portions of this chapter may or may not apply to your direct application. If a question should arise during the installation process, please contact Stellar Customer Service at (800) 321 3741.

This crane is designed for use with a Stellar Service Body installed on a vehicle that meets the minimum chassis requirements of the crane. Check with Stellar Industries before installing this crane on a body other than a Stellar Service Body.

WARNING!
The use of this crane on a body not capable of handling the loads imposed on it may result in serious injury or death.

Notice:
 PTO and Pump installation instructions are provided by the corresponding manufacturers. For more information on which PTO and Pump fit your application, please contact your local Stellar Distributor or Stellar Customer Service.

Installation Notice

According to Federal Law (49 cfr part 571), each final-stage manufacturer shall complete the vehicle in such a manner that it conforms to the standards in effect on the date of manufacture of the incomplete vehicle, the date of final completion, or a date between those two dates. This requirement shall, however, be superseded by any conflicting provisions of a standard that applies by its terms to vehicles manufactured in two or more stages.


Therefore, the installer of Stellar cranes and bodies is considered one of the manufacturers of the vehicle. As such a manufacturer, the installer is responsible for compliance with all applicable federal and state regulations. They are required to certify that the vehicle is in compliance with the Federal Motor Vehicle Safety Standards and other regulations issued under the National Traffic and Motor Vehicle Safety Act.

Please reference the Code of Federal Regulations, title 49 - Transportation, Volume 5 (400-999), for further information, or visit <http://www.gpoaccess.gov/nara/index.html> for the full text of Code of Federal Regulations.

Installation Overview

For more detail, please contact Stellar Customer Service

1. Relocate any obstructions on the frame that will be in the way of mounting the crane.
2. Measure the inside of the frame rails and cut the frame support to this length. Ensure that the frame supports have a tight fit between the frame rails.
3. Set the crane on the chassis and allow a minimum of 2" from the cab.
4. Install the crane tie downs. Start at one corner and tighten both tie downs to 200 ft-lbs. Move to the diagonal set and tighten to 200 ft-lbs. Tighten the remaining 2 corners. Continue this pattern at 200 ft-lb increments until 650-700 ft-lbs is achieved. Be sure the mounting block stays perpendicular to the frame rail as they are tightened down.
5. Connect the pressure and return lines per the hydraulic kit.
6. Connect the (+12V) power and ground wires.
7. Check the reservoir for oil and fill if necessary.
8. Operate the crane for several cycles.

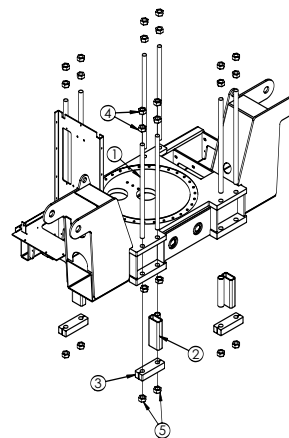


PN 26030

ITEM	PART	DESCRIPTION	QTY.
1	8900	TIE DOWN ROD 15000	8
2	8202	FRAME SUPPORT 15000 CRANE	4
3	8054	MTG BLOCK 15000	4
4	8978	NUT 1.25-7 HHGR8	16
5	8834	NUT 1.25-7 HHGR8 TOP LOCKING	8

SURGE PROTECTOR #34355
 INCLUDED IN THIS KIT

Install Kit (PN 26030)


Mounting Kit Drawing

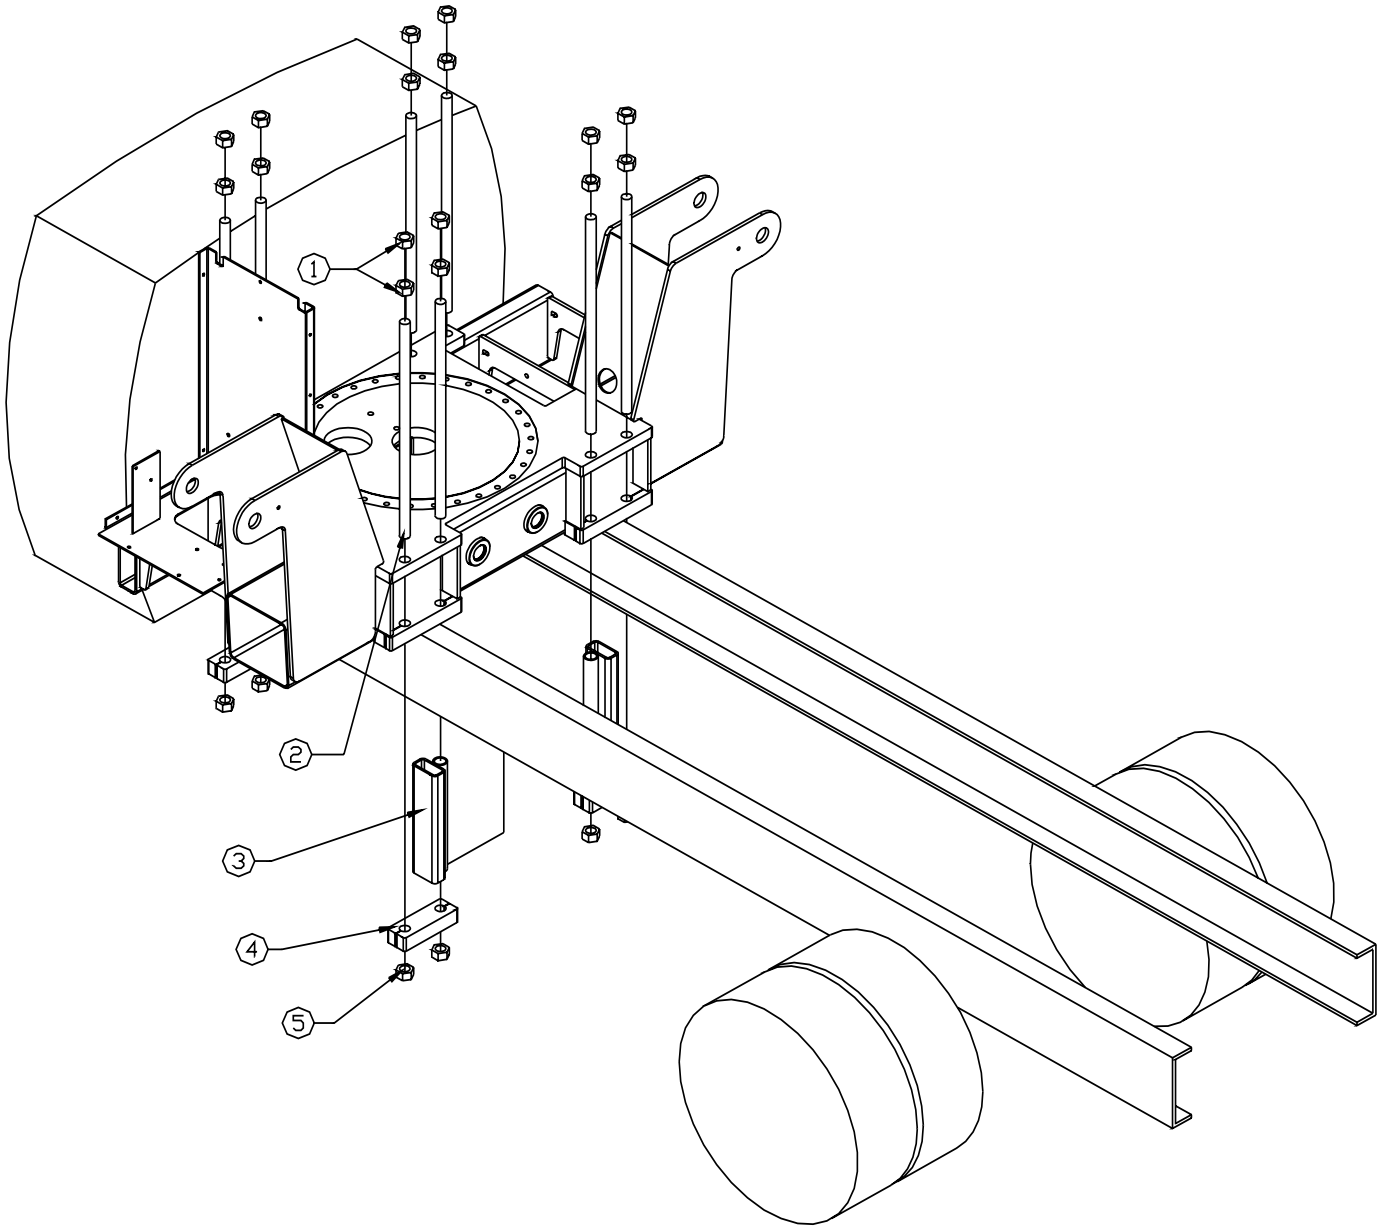

ITEM	P/N	DESCRIPTION	QTY	ITEM	P/N	DESCRIPTION	QTY
1	8978	Nut 1.25-7 HH GR8	16	4	8054	Mounting Block	4
2	8900	Tie Down Rod	8	5	8834	Nut 1.25-7 HH GR8 Top Locking	8
3	8202	Frame Support	4				

Chapter 7 - Assembly Drawings


Base Assembly - PN 20299

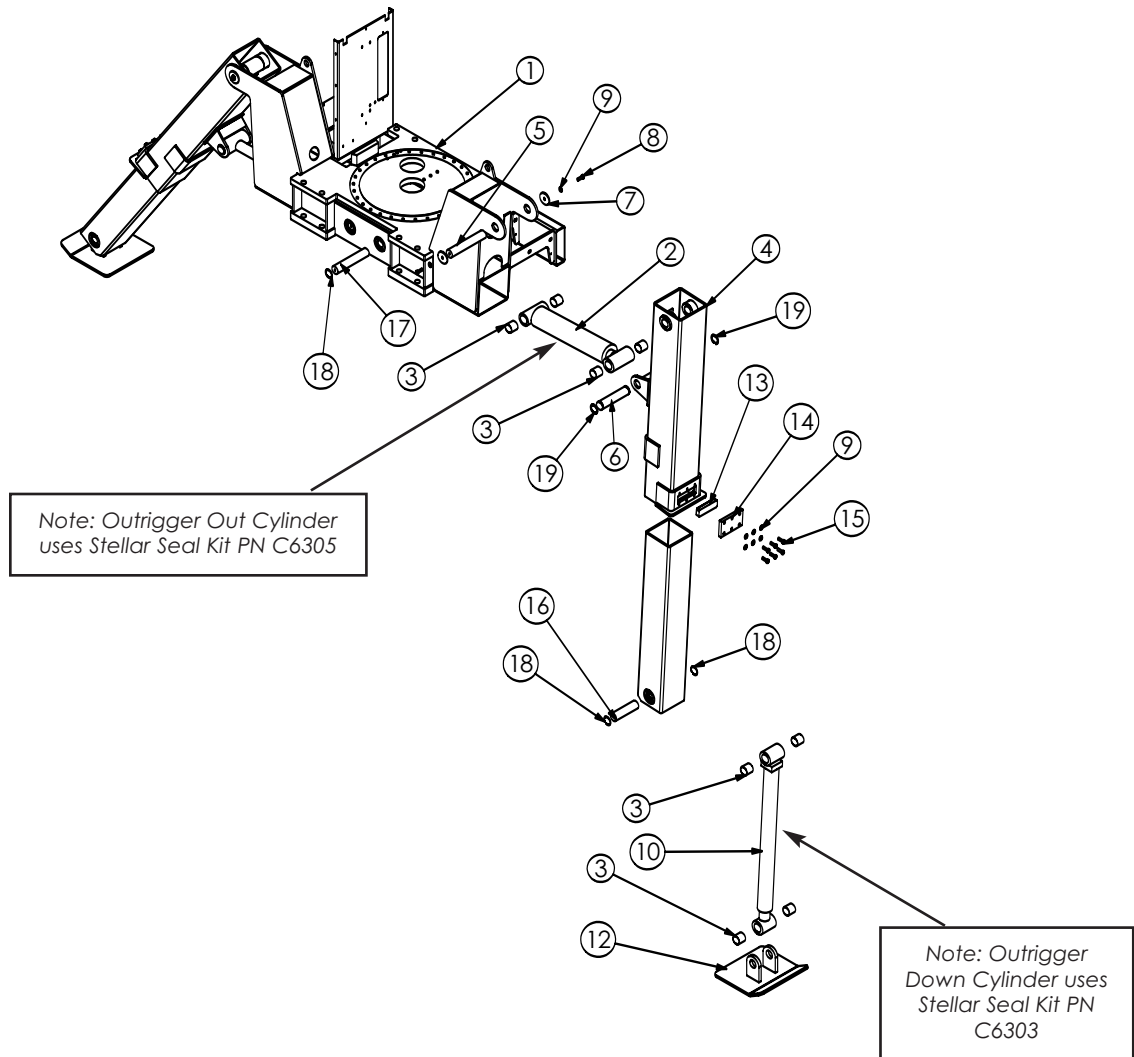

PN 20299

ITEM	PART	DESCRIPTION	QTY.
1	6546	BASE 15000	1
2	6774	CYLINDER 15000 OUTRIGGER OUT	2
3	4381	BUSHING 32DXR32 2.00X2.00 GARLOCK	16
4	6543	OUTRIGGER 15000	2
5	13161	PIN 2.00X11.13 D&T	2
6	0065	PIN 2.00X9.00	2
7	5145	PIN CAP 0.56X3.00X.25	4
8	0359	CAP SCR 0.50-13X1.50 HHGR5	4
9	D0790	WASHER 0.50 FLAT GR8	16
10	6773	CYLINDER 15000 OUTRIGGER	2
11	6554	OUTRIGGER LEG 15000	2
12	6551	OUTRIGGER PAD 15000	2
13	9342	WEAR PAD 2.00X6.00X1.00	2
14	9340	COVER WEAR PAD 15000	2
15	10548	CAP SCR 0.50-13X1.50 HHGR8	12
16	6764	PIN 2.00X7.25	2
17	6697	PIN 2.00X10.25	2
18	2257	SNAP RING INSIDE 2.00	8
19	0108	SNAP RING 2.00 7200-200	4


Mast Assembly - PN 20300

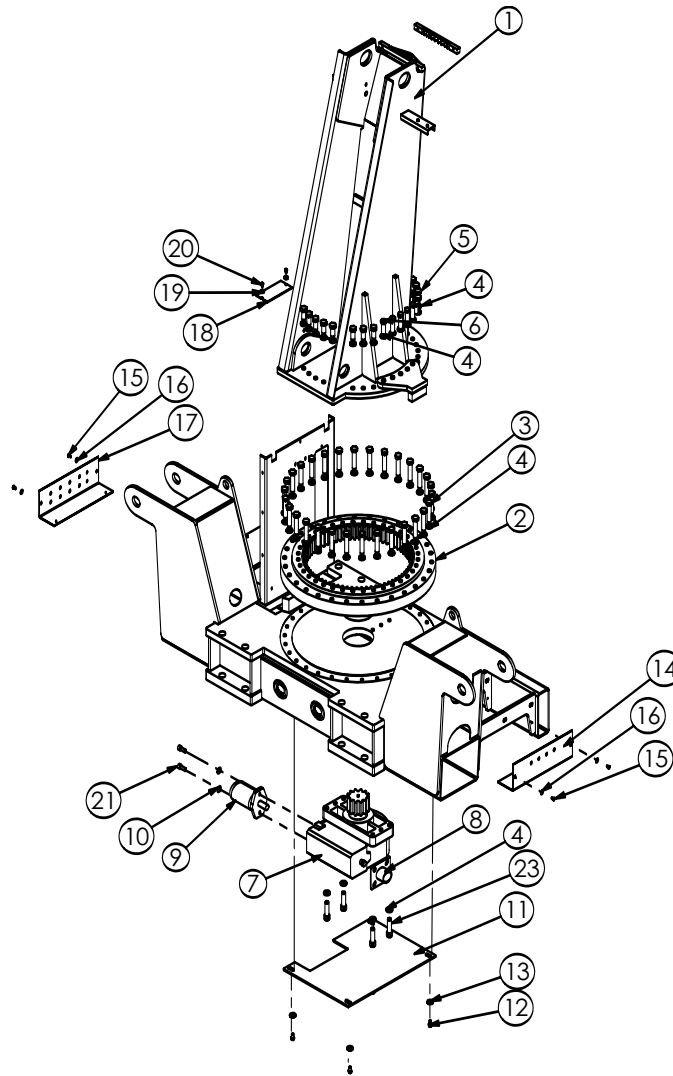

PN 20300

ITEM	PART	DESCRIPTION	QTY.
1	6435	Mast 15000	1
2	6536	TURNTABLE BEARING 450-05135-1	1
3	C6218	CAP SCR 0.75-10X4.00 HHGR8 ZY	30
4	C6219	WASHER 0.75 SAE FLAT YELLOW GR8	68
5	4543	CAP SCR 0.75-10X2.00 HHGR8 ZY	29
6	C1028	CAP SCR 0.75-10X3.00 HHGR8 ZY	5
7	6537	GEAR BOX 015-00120-1	1
8	8051	COVER GEAR BOX 15000	1
9	5311	MOTOR HYD ROSS MG140611AAAB	1
10	D0790	WASHER 0.50 FLAT GR8	2
11	9046	PLATE BASE COVER 15000	1
12	C0990	CAP SCR 0.50-13X0.75 HHGR5	4
13	0352	WASHER 0.50 USS FLAT ZINC	4
14	8611	PLATE SWITCH MTG 15000 CRANE	1
15	0478	CAP SCR 0.25-20X0.50 HHGR5	4
16	0340	WASHER 0.25 FLAT	4
17	8612	PLATE SWITCH MTG 15000 CRANE	1
18	21533	PLATE INSPECTION MAST 15000	1
19	0343	WASHER 0.31 USS FLAT ZINC	2
20	0484	CAP SCR 0.31-18 X 0.50 HHGR5	2
21	D1307	CAP SCR 0.50-13X1.25 SH	2
22	13309	HOSE CLAMP 15000	1
23	35097	CAP SCR 0.75-10X3.00 SHGR8 ZINC	4


Boom Assembly - PN 20601

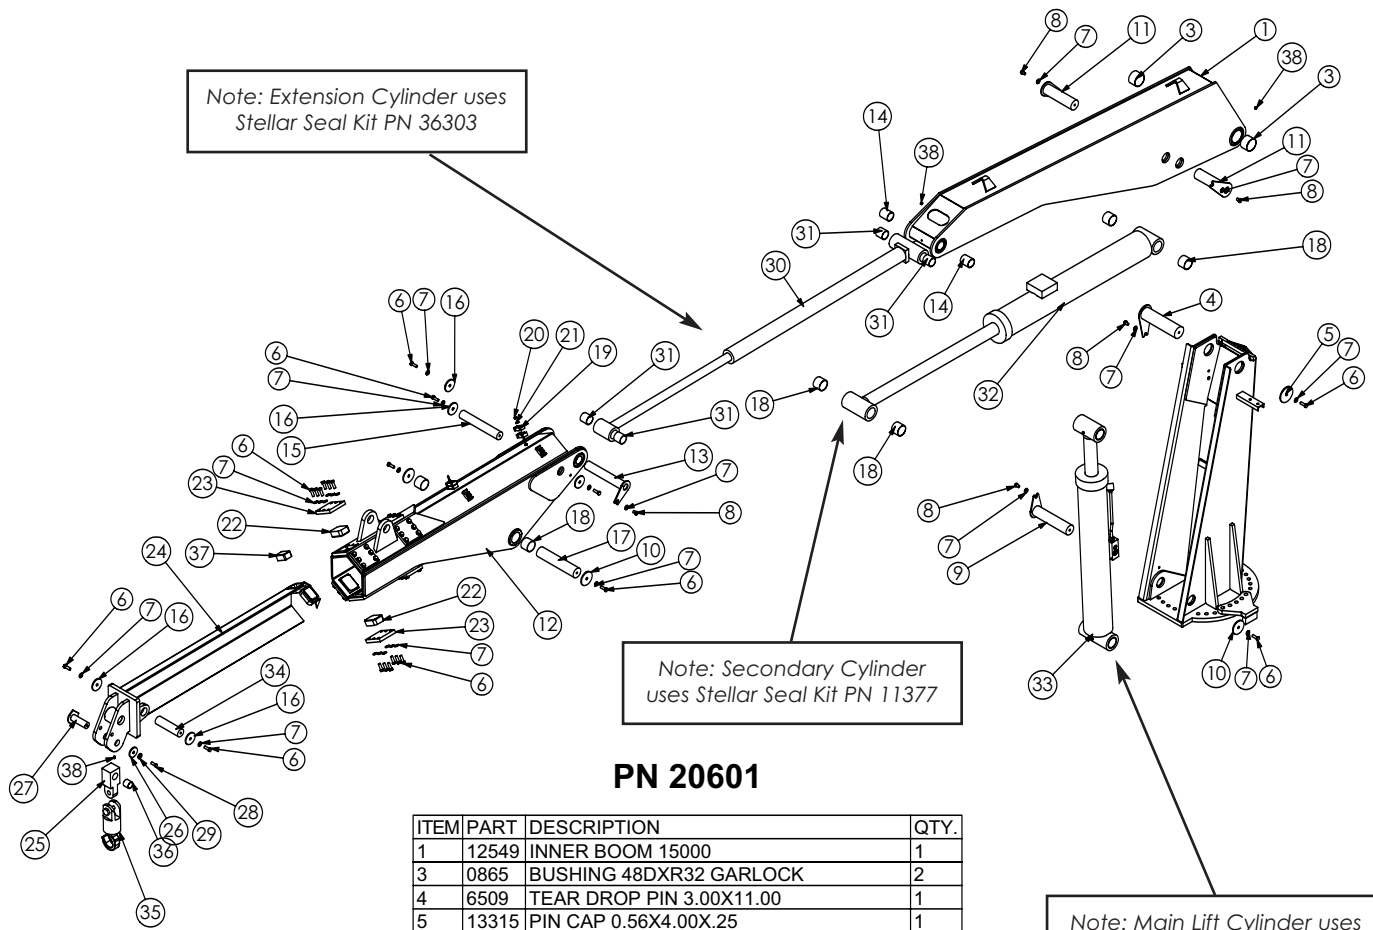

PN 20601

ITEM	PART	DESCRIPTION	QTY.
1	12549	INNER BOOM 15000	1
3	0865	BUSHING 48DXR32 GARLOCK	2
4	6509	TEAR DROP PIN 3.00X11.00	1
5	13315	PIN CAP 0.56X4.00X.25	1
6	0359	CAP SCR 0.50-13X1.50 HHGR5	57
7	D0790	WASHER 0.50 FLAT GR8	62
8	9844	CAP SCR 0.50-13X0.75 HHGR8	5
9	6507	TEAR DROP PIN 2.50X11.00	1
10	8377	PIN CAP 0.56X3.50X.25	3
11	12834	PIN TEAR DROP 2.50X9.13	2
12	12145	OUTER BOOM 15000 B	1
13	12706	PIN TEAR DROP 2.00X12.25	1
14	4379	BUSHING 32DXR40 2.00X2.50 GARLOCK	2
15	12708	PIN 2.00X12.25 D&T	1
16	5145	PIN CAP 0.56X3.00X.25	5
17	6782	PIN 2.50X12.00 D&T	1
18	0635	BUSHING 40DXR32 GARLOCK	6
19	8621	CLAMP HOSE/TUBE AG-3	6
20	0342	NUT 0.31-18 HH NYLOC	4
21	0343	WASHER 0.31 USS FLAT ZINC	4
22	12548	WEAR PAD 3.00X4.00X1.38 NYLATRON	8
23	12547	PLATE WEAR PAD COVER 15000	8
24	12538	EXT BOOM 15000 B	1
25	6699	SWIVEL LINK 15000	1
26	9142	PIN CAP 0.56X2.50X.25	1
27	12546	PIN TEAR DROP 1.50X4.63	1
28	0498	CAP SCR 0.50-13X1.25 HHGR5	1
29	0352	WASHER 0.50 USS FLAT ZINC	1
30	12705	CYLINDER EXT 15000	1
31	4381	BUSHING 32DXR32 2.00X2.00 GARLOCK	4
32	6771	CYLINDER 15000 OUTER BOOM	1
33	23575	CYLINDER ASM 6.00X21.00	1
34	12709	PIN 2.00X7.31 D&T	1
35	6340	HOOK 8.50 TON SWIVEL 297413	1
36	0067	BUSHING QSI-2426-24	1
37	13641	WEAR PAD 2.21X3.21X1.38	2
38	c1592	ZERK 1/8 NPT STRAIGHT	3

Cylinder Assembly - PN 23575

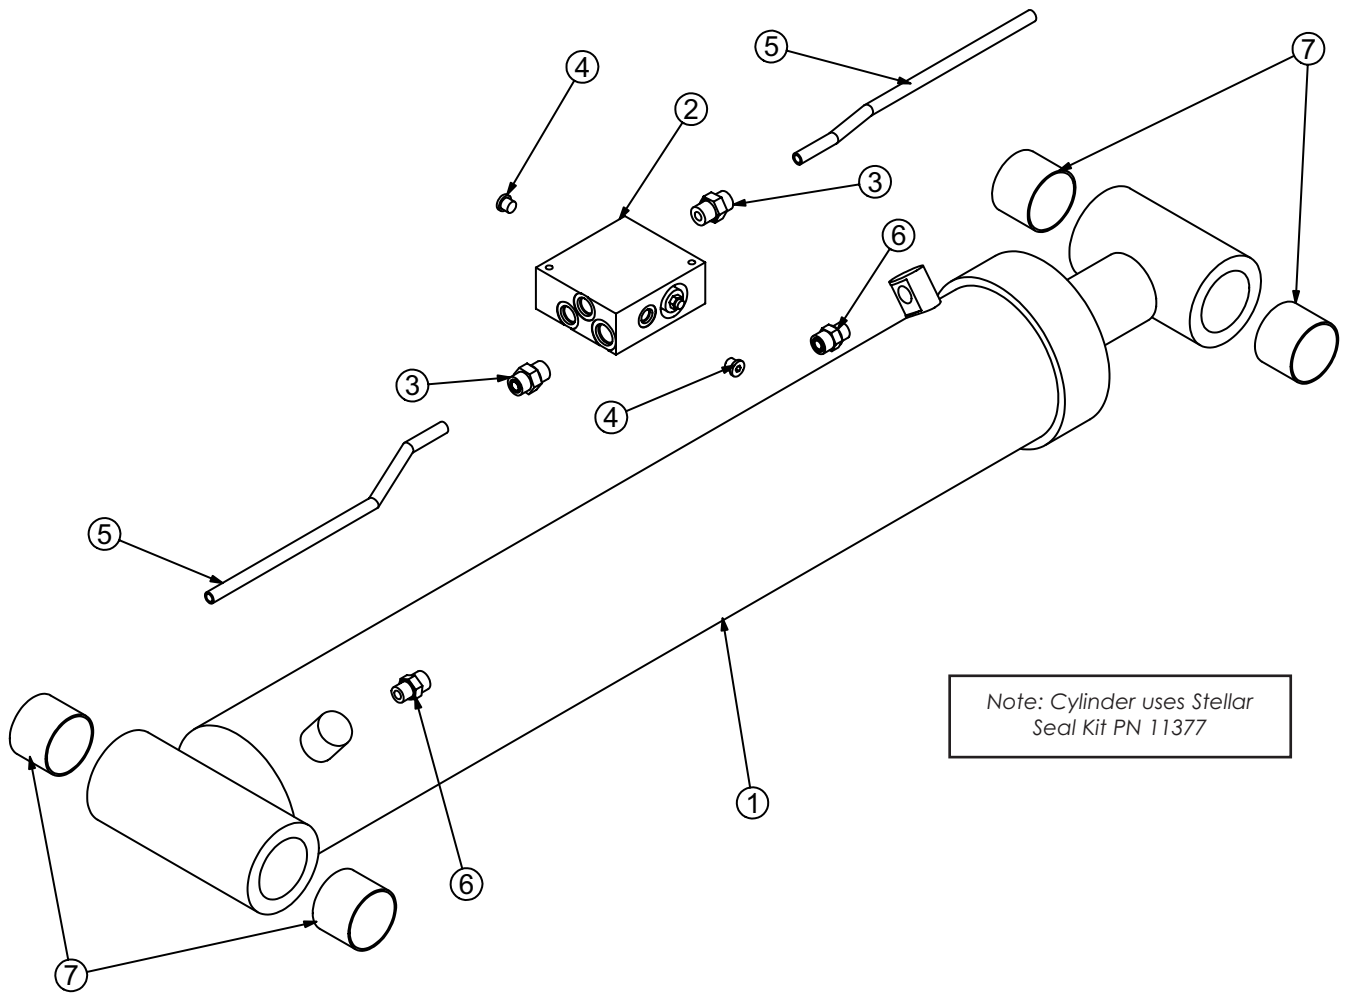


Note: Cylinder uses Stellar Seal Kit PN 11377

PN 23575

ITEM	PART	DESCRIPTION	QTY.
1	6769	CYLINDER 15000 INNER BOOM	1
2	15995	MANIFOLD ASM DUAL T2A 5000PSI	1
3	C2252	FTG ADAPT 8-10-F5OLO-S	2
4	C4961	PLUG STR HOLLOW HEX 0.38 6-HP5ON	2
5	23576	TUBE ASM 0.50X14.21	2
6	1554	FTG ADAPT 8-F5OLO-S	2
7	0635	BUSHING 40DXR32 GARLOCK	4


Pendant Box Assembly - PN 20602

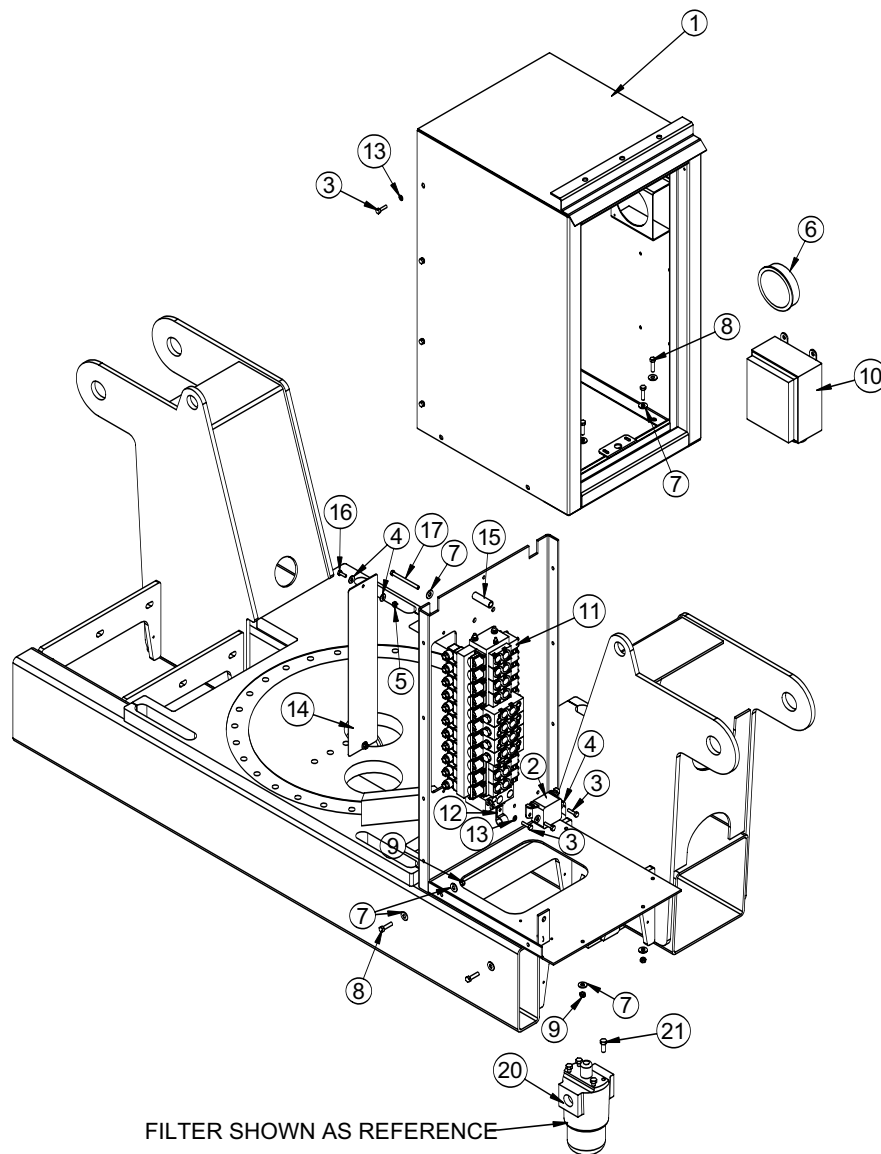

PN 20602

ITEM	PART	DESCRIPTION	QTY.
1	8066	COMPT, PENDANT 15000 CRANE	1
2	D0045	BACKUP ALARM .97 DECIBAL	1
3	0480	CAP SCR 0.25-20X1.00 HHGR5	11
4	0340	WASHER 0.25 FLAT	8
5	0333	NUT 0.25-20 HHGR5 NYLOC	5
6	7972	DOME LIGHT 4.00	1
7	0343	WASHER 0.31 USS FLAT ZINC	15
8	0485	CAP SCR 0.31-18X1.25 HHGR5	6
9	0342	NUT 0.31-18 HH NYLOC	6
10	13390	RECEIVER OMNEX RADIO	1
11	24904	VB 11 SECT HAWK 15000 CRANE	1
12	C0082	CLAMP 0.75 BLK VINYL	1
13	C1033	WASHER 0.25 USS FLAT ZINC	10
14	31923	SHEET COVER 15000 VB	1
15	31924	PIPE 0.38 SCH40X2.25	3
16	0479	CAP SCR 0.25-20X0.75 HHGR5	2
17	0490	CAP SCR 0.31-18X3.50 HHGR5	3
18	8068	DOOR AL OH 32.69X14.13	1
19	10638	HARDWARE ASM OH DOOR NOT SHOWN	1
20	9334	FILTER PRESSURE 15000 CRANE	1
21	11691	CAP SCR 0.38-24X1.00 HHGR8	4

Reservoir Assembly - PN 12960

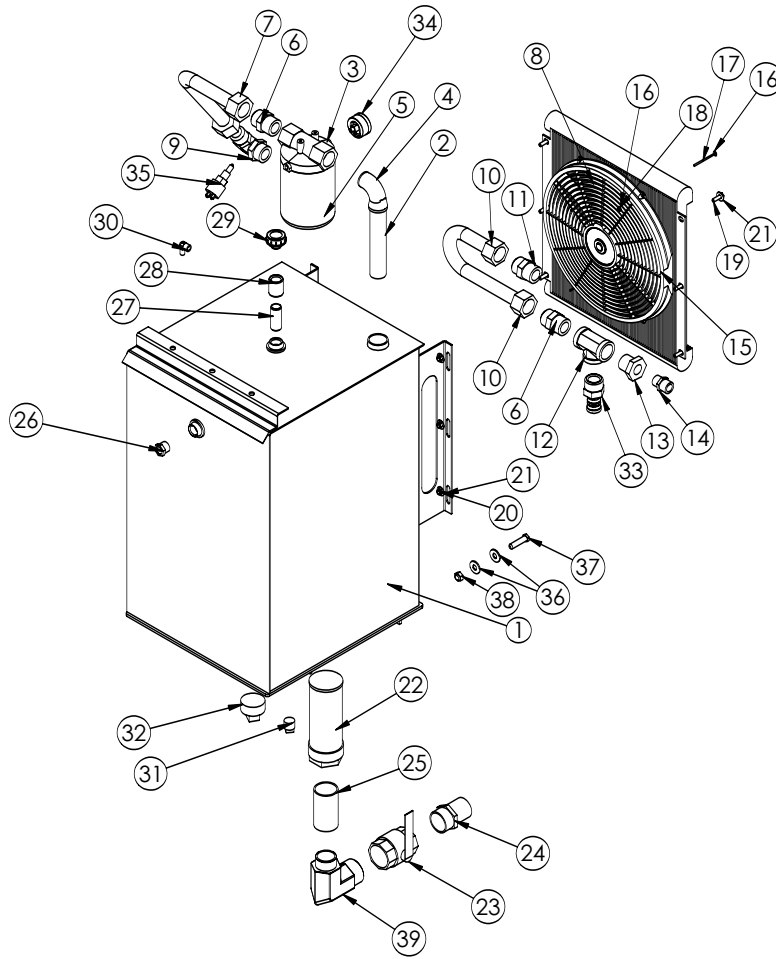

PN 12960

ITEM	PART	DESCRIPTION	QTY.
1	8116	OIL TANK 40GAL	1
2	C4745	NIPPLE 1.25X8.00 BLK PIPE	1
3	C6228	FILTER HEAD SF120-25 1.3	1
4	C4694	ST EL 1.25 90 DEG BLK	1
5	C6225	FILTER LARGE SE-10	1
6	10098	FIG M/JIC/MNPT 20-FIX	2
7	10096	TUBE ASM 1.25 CLR TO RSRVR 15000	1
8	8240	COOLER OIL BLISSFIELD #65155SPECIAL	1
9	24910	FIG M/JIC/MSTR 90 20-C5OX MOD	1
10	10097	TUBE ASM 1.25 COMP/CRN/CLR 15000	1
11	10951	FIG M/JIC/MNPT 20-FIX	1
12	C6170	TEE 1.25 STL	1
13	C2375	FIG REDU 0102-20-12	1
14	C4952	FIG ADAPT 12 FLO-S	1
15	8241	FAN 16.00 PUSH 12 VOLT	1
16	5290	WASHER #8 SAE FLAT ZP	4
17	D0075	SCREW #6-32X2.75 RH HD MACHINE	2
18	D0076	NUT #6-32 HH NYLOC	2
19	C0922	CAP SCR 0.31-18X1.00 HHGR5	6
20	0342	NUT 0.31-18 HH NYLOC	6
21	0343	WASHER 0.31 USS FLAT ZINC	12
22	C6327	FILTER STRAINER 35GAL TF-2030	1
23	C4750	VALVE BALL 2.00	1
24	C4730	FIG HOSE BARB 2.00	1
25	D0653	NIPPLE 2.00X4.00 BLK	1
26	C4955	SIGHT GAUGE 3/4 NPT EYE	1
27	C1053	NIPPLE 0.75X2.50 BLK PIPE	1
28	C5930	COUPLER 0.75 BLK	1
29	C2151	CAP FILLER BREATHER	1
30	D1263	FIG HOSE BARB 0.38 HOSE X 0.38 90DG	1
31	C2126	MAGNETIC PLUG DRAIN 3/4"	1
32	C4847	PLUG 2.00 NPT SQ HD BLK	1
33	C2282	FIG 1.25 NPT TO 1.25 BARB	1
34	16145	GAUGE PRES FILTER SERVICE C120	1
35	D1862	SWITCH TEMP HT-2A-100R-38NPT 25A	1
36	0352	WASHER 0.50 USS FLAT ZINC	12
37	0501	CAP SCR 0.50-13X2.00 HHGR5	6
38	C6106	NUT 0.50-13 HHGR5 NYLOC	6
39	D0652	ST EL 2.00 90 DEG STL	1

Chapter 8 - Hydraulics - Electrical

WARNING!

Please read the following section before performing any work on the hydraulic/electrical system of your crane. This section contains vital safety information and maintenance guidelines for your crane. If questions should arise, please contact Stellar Customer Service at 800-321-3741

Never modify or alter any of the equipment, whether mechanical, electrical, or hydraulic, without Stellar Industries' approval.

Release system pressure before attempting to make adjustments or repairs.

Do not attempt service or repair when PTO is engaged.

Disassemble and assemble hydraulic components on a clean surface.

Clean all metal parts in a nonflammable cleaning fluid. Then lubricate all components to aid in assembly.

Hydraulic fluid expands when heated. This raises the pressure in an unventilated tank. Release the tank pressure before removing the cap completely. Failure to do so may cause the oil to shoot out of the tank very rapidly and cause severe burns.

Warning! If hydraulic fluid escapes, the boom or crane can fall immediately. Make sure the ground or blocking is supporting the boom before performing any maintenance or repair.




Do not rely on the hydraulic fluid to support the boom or crane.

Contaminants in a hydraulic system affect operation and will result in serious damage to the system components. Dirty hydraulic systems are a major cause of component failures.


If evidence of foreign particles is found in the hydraulic system, flush the system.

When installing metal hydraulic tubes, tighten all bolts finger tight. Then, in order, tighten the bolts at the rigid end, the adjustable end, and the mounting brackets. After tubes are mounted, install the hoses. Connect both ends of the hose with all bolts finger tight. Position the hose so it does not rub the machine or another hose and has a minimum of bending and twisting. Tighten bolts in both couplings.

Due to manufacturing methods, there is a natural curvature to a hydraulic hose. The hose should be installed so any bend is with this curvature.

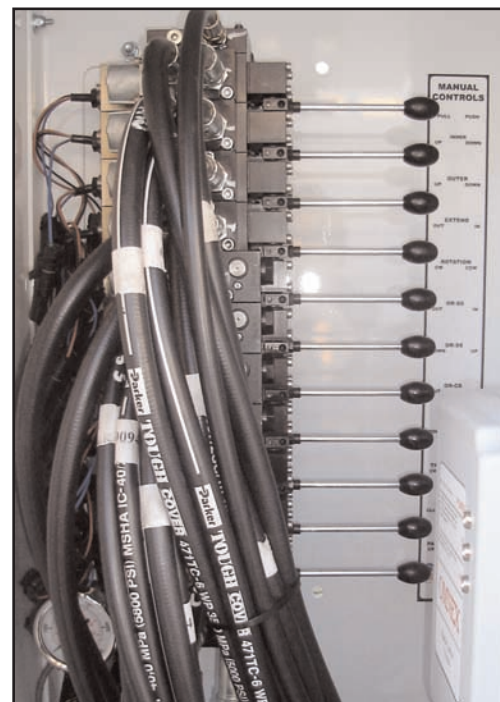



Control Kit - PN 33943

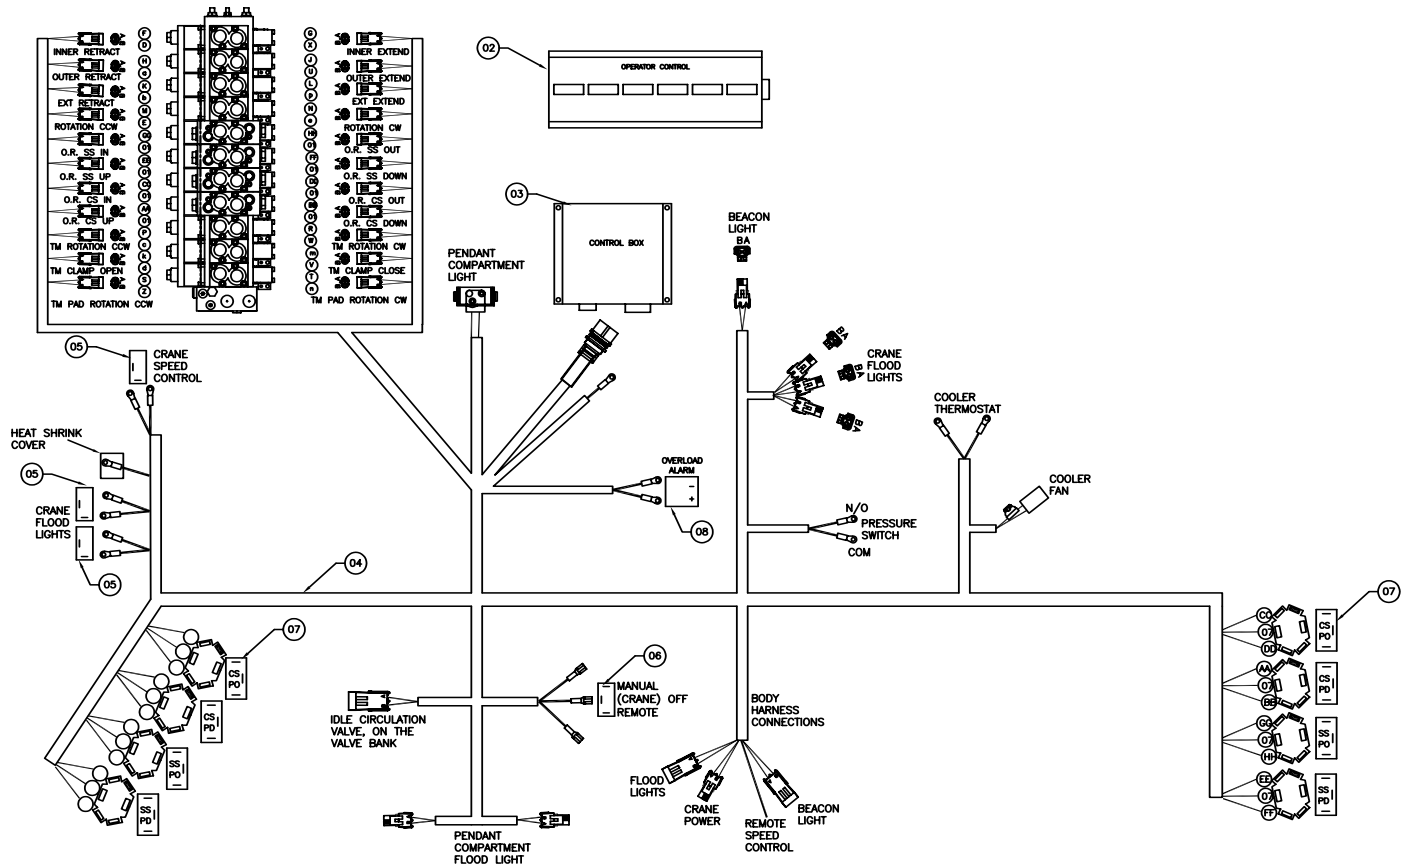

PN 33943

ITEM	PART No.	DESCRIPTION	QTY
01	9873	CONTROLLER ASSEMBLY (incl:2-5)	1
02	13976	HANDLE ASSEMBLY	1ref
03	13390	CONTROL BOX	1ref
04	22322	WIRE HARNESS 15000 CRANE	1
05	C4815	SWITCH TOGGLE ON/OFF	3
06	8823	SWITCH TOGGLE ON-OFF-ON SGL P DBL T	1
07	6394	SWITCH, TOGGLE SPDT MOM	8
08	D0045	BACKUP ALARM .97 DECIBAL	1
09	11292	BATTERY CHARGER AUTOMOTIVE	1
10	11291	BATTERY 9.6V RECHARGEABLE	2

Hydraulic Kit - PN 33942

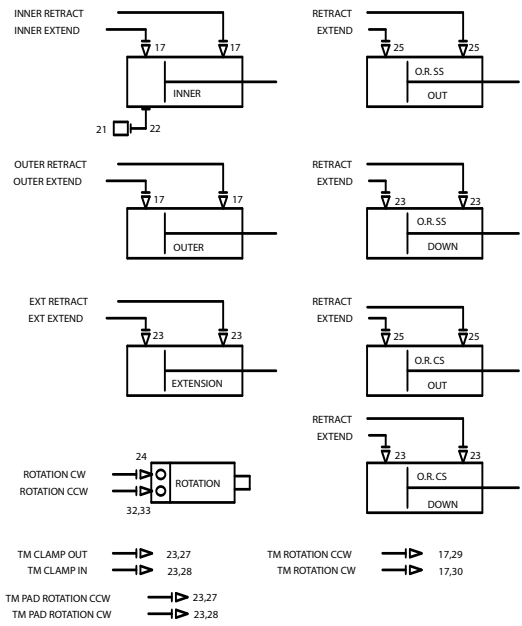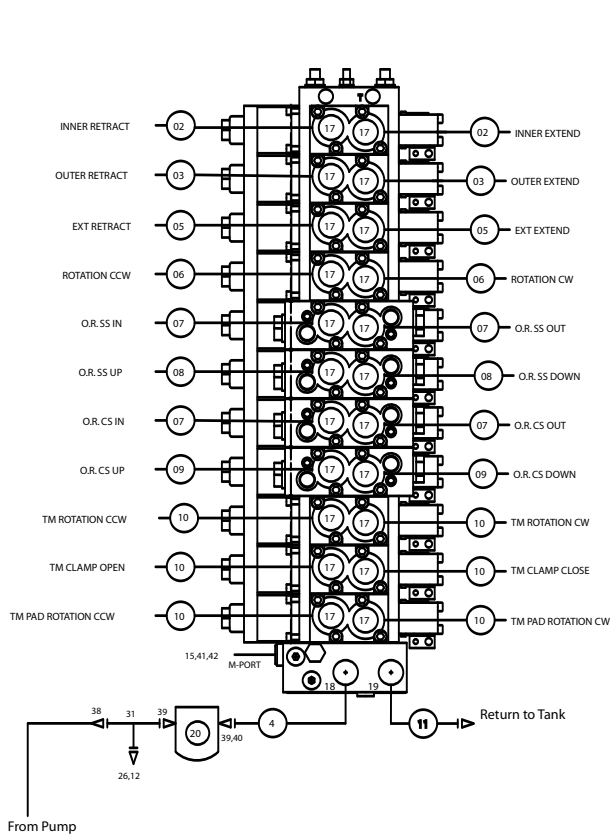

PN 33942

42	6691	FTG MSTR/FNPT4-1/4	1
41	C5908	FTG 0.25 ML ELL	1
40	C1180	FTG ADAPT 8-12 FSOLO-S	1
39	D1311	FTG ADAPT MSTR/FSTR 20-12FSOGS	2
38	C4227	FTG ADAPT 12 FSOLO-S	2
37			
36			
35			
34	C5968	FTG ADAPT 12 CSOLO-S	1
33	D1193	FTG ADAPT 16-8FSOG-S	1
32	C1111	FTG ADAPT 8 CSOLO-S	1
31	15776	FTG TEE ST TH BRANCH 12-GSGS, JAO-S	1
30	13556	QUICK COUPLER 2FFN38-12SAE-F	1
29	13557	QUICK COUPLER 2FFN38-12SAE-M	1
28	13554	QUICK COUPLER 2FF114-38SAE-F	1
27	13555	QUICK COUPLER 2FF114-38SAE-M	1
26	9766	FTG ADAPT MSTR/FNPT 12 - 0.25	2
25	C4922	FTG ADAPT 4-6 FSOLO-S	4
24	C1855	FTG ADAPT 6-10 FSOLO-S	1
23	0279	FTG ADAPT 6-FSOLO-S	6
22	3861	FTG, ELBOW 6815-6-6	1
21	16974	PRESSURE SWITCH	1
20	9334	HIGH PRESSURE FILTER	1
19	7344	FTG ADAPT 12-8 FSOLO-S	1
18	1554	FTG ADAPT 8-FSOLO-S	1
17	C1854	FTG ADAPT 6-8 FSOLO-S	37
16	7343	FTG ADAPT 6-8 VSOLO-S 4SDG	2
15	6397	GAUGE OIL LF 2.5 0-5000 CBM	1
14			
13			
12	38894	HOSE HYD 0.25 X 132	1ref
11	9104	HOSE-HYD .75X72	1ref
10	9097	HOSE HYD 0.25 X 289	6ref
09	9096	HOSE-HYD 0.50 X 113	2ref
08	9095	HOSE-HYD 0.38 X 76	2ref
07	9094	HOSE-HYD 0.25 X 71	4ref
06	9093	HOSE-HYD 0.38 X 48	2ref
05	9092	HOSE-HYD 0.38 X 258	2ref
04	16526	HOSE-HYD 0.50X 20	1ref
03	9050	HOSE-HYD 0.38 X 217	2ref
02	9049	HOSE-HYD 0.38 X 93	2ref
01	9048	HOSE KIT,15000 CRANE (incl2-14)	1
ITEM	PART No.	DESCRIPTION	QTY

Chapter 9 - Replacement Parts

Hydraulic System Components

Part#	Description
6397	Oil pressure gauge
37829	Solenoid valve (Dump valve)
5311	Hydraulic rotation motor (Crane rotation)
16974	Pressure switch
33290	Handle assembly (Valve bank)
C6327	Filter Strainer (Hydraulic reservoir)
C1090	Counter balance valve (Cylinders)
C2028	O ring (# 6 face seal) (hydraulic fittings)
C2029	O ring (# 8 face seal) (hydraulic fittings)
32223	O ring (#10 face seal) (hydraulic fittings)
D1244	O ring (#12 face seal) (hydraulic fittings)
D1245	O ring (# 4 SAE port side) (hydraulic fittings)
D1246	O ring (# 6 SAE port side) (hydraulic fittings)
D1247	O ring (# 8 SAE port side) (hydraulic fittings)
D1248	O ring (#10 SAE port side) (hydraulic fittings)
D1249	O ring (#12 SAE port side) (hydraulic fittings)
D1250	O ring (#16 SAE port side) (hydraulic fittings)
16158	Port tube asm - (Secondary cylinder) 15604
C6303	Seal kit - Outrigger cylinder (6773)
C6305	Seal kit - Outrigger cylinder (6774)
11377	Seal kit - Main lift cylinder (23575)
11377	Seal kit - Secondary cylinder (6771)
C6303	Seal kit - Extension cylinder (12705)

Structural Parts

Part#	Description
#0635	Bushing 2.50" x 2.00"
#0865	Bushing 3.00" x 2.00"
4381	Bushing 2.00" x 2.00"
#0067	Bushing 1.50" x 1.50"
4379	Bushing 2.00" x 2.50"
8377	Pin Cap 0.56 x 3.50" x .25 SS
13315	Pin Cap 0.69 x 4.00" x .25 SS
9142	Pin Cap 0.56 x 2.50" x .25 SS
5145	Pin Cap 0.56 x 3.00" x .25 SS
10172	Cap Screw 0.50-13 x 1.00 Gr 8
D0790	Washer 0.50 Flat Gr 8
C1592	Grease Zerk 1/8 NPT
9342	Wear Pad 2.00" x 6.00" x 1.00"
13641	Wear Pad 2.21" x 3.21" x 1.38"
12548	Wear Pad 3.00" x 5.00" x 1.75"

Electrical Components

Part#	Description
8241	Fan 16.00 push 12 V (Hydraulic reservoir)
6394	Toggle switch (Outrigger operation)
8623	Toggle switch (Outrigger operation)
C4815	Toggle switch (Outrigger operation)
D1862	Temperature switch (Hydraulic reservoir)
11291	9.6 V Makita battery (Radio Transmitter)
22921	E-stop switch (Crane panic bar)
38978	Standard Din connector (functional cut-out) VB
38979	Dump valve Din connector VB
14941	Paddle controller (Omnex radio transmitter)

Compressor Components

Part#	Description
3853	Pilot valve 145/175 psi (SHD245 cprsr)
C4913	Solenoid valve (SHD245 cprsr)
C4914	Pressure Relief valve (SHD245 cprsr)
C0864	Hobbs air pressure switch (SHD245 cprsr)
13731	Low pressure intake valve asm (SHD245 cprsr)
13733	High pressure intake valve asm (SHD245 cprsr)

Service Kits/Filters/Lubrication

Part#	Description
4562	Air filter (SHD245 cprsr)
9335	High pressure hydraulic filter (28000 Crane)
C6225	Hydraulic return filter (Crane / cprsr)
32893	Service Kit - 200 hour (SHD245 cprsr)
14532	Service Kit - 1 year (Crane / cprsr)
4460	Molube grease-external gear teeth for swing gears

TM6120 Tire Man Components

Part#	Description
D1204	Hydraulic rotation motor (Tireman pad rotation)
21151	Hydraulic rotation motor gasket
13555	Hydraulic quick coupler
13554	Hydraulic quick coupler
13557	Hydraulic quick coupler
13556	Hydraulic quick coupler
4482	Combination flow divider
38975	Seal Kit - Tireman clamp in / clamp out cylinders

Miscellaneous Components

Part#	Description
12341	Flood lights (Crane & Body)
5033	Strobe light (Crane & Body)
14022	Compartment light

Call 800-321-3741 to Order

Chapter 10 - Troubleshooting

This chapter will list a number of potential problems that may occur while operating the crane. Most problems are easily solved using the solutions portion of this chapter. If problems persist, please contact Customer Service at Stellar Industries 1-800-321-3741.

Problem: Crane will not operate.

Solutions:

- Make sure that the parking brake is engaged.
- Make sure that the PTO is engaged.
- Make sure that there is 12V power going to the radio receiver. If there is no power going to the receiver, trace back to the power source and check for a blown fuse or loose ground connection.
- Make sure that the transmitter batteries are fully charged. (Rechargeable batteries are good for 11 months or 200 charges)
- Make sure that the hydraulic pump is operating at its rated flow or GPMs. Check the flow by using the flow meter to determine the GPMs. It is possible that the hydraulic pump is getting weak. If this is suspected, contact Stellar Customer Service.

Problem: Crane operates slowly.

Solutions:

- Make sure that the crane is receiving the recommended GPMs to operate.
- Check the level of hydraulic fluid in the reservoir. Add fluid as needed.
- Check to see if the valve bank flow valve is operating.
- Make sure the proportional valve is receiving 12V power when operating a function.

Problem: Crane will operate manually but will not operate electrically.

Solutions:

- Make sure that there is 12V power going to the radio receiver. If there is no power going to the receiver, trace back to the power source and check for a blown fuse or loose ground connection.
- Make sure that the parking brake is engaged.
- Make sure that the parking brake switch is working properly. Check the parking brake switch by performing a continuity test. If the switch is defective, simply replace it.
- Make sure the "Power" LED is on outside the receiver door cover. This light is the upper light on the receiver door. If the light does not come on, check wiring back to the fuse. If the fuse is OK, check system ground wires and connections.
- Make sure the green LED on the receiver door is lit green. This light will come on when the red e-stop is pulled upward and the toggle switch is activated on the transmitter. If the radio system does not link up and no green light is lit on the receiver - make sure that the battery is fully charged, check the battery contact points to make sure they are not tarnished or corroded. Clean contact points and recharge or replace the battery.
- When battery voltage is acceptable, the power LED light on the transmitter will be solid. If the voltage becomes low, the LED light will begin to blink and the battery will need to be charged or replaced.

**If problems persist, please contact Stellar Customer Service at:
1-800-321-3741**

Problem: Cylinder drifts outward or downward.**Solutions:**

- Check to see if there is air in the hydraulic system. Operate all cylinders connected to the hydraulic system. Start with the extension cylinder, then operate the main boom, winch, rotation, and ending with the hydraulic outriggers, if installed. When operating, extend each cylinder halfway out, retract all the way in, and then extend until the cylinder rod is at the end of its stroke. Operate cylinders slowly so air is pushed thru the system to the reservoir. Repeat this cycle 2-3 times.
- Make sure the holding valves are operating properly. Remove, clean, and then inspect each holding valve. When removing a holding valve, always relieve the pressure inside the cylinder by loosening jam nut of the holding valve and turning set screw inward/clockwise. Count the number of turns until the set screw is seated. When reinstalling the holding valve, make sure the valve is reset by turning the set screw the number of turns it took to relieve the pressure. Finish by tightening the jam nut.
- Check the cylinder rod for scratches. If a scratch is located on the cylinder rod, hydraulic fluid can pass thru and cause a loss of pressure. Replace cylinder rod or cylinder.
- Check to see if the piston seals are damaged. If they show signs of damage, install a new cylinder seal kit.

Problem: Crane will operate manually but will not operate electronically.**Solutions:**

- Make sure the "Power" LED is on outside the receiver door cover. This light is the upper light on the receiver door. If the light does not come on, check wiring back to the fuse. If the fuse is OK, check system ground wires and connections.
- Make sure the green LED on the receiver door is lit green. This light will come on when the red e-stop is pulled upward and the toggle switch is activated on the transmitter. If the radio system does not link up and no green light is lit on the receiver - make sure that the battery is fully charged, check the battery contact points to make sure they are not tarnished or corroded. Clean contact points and recharge or replace the battery.
- When battery voltage is acceptable, the power LED light on the transmitter will be solid. If the voltage becomes low, the LED light will begin to blink and the battery will need to be charged or replaced.

Problem: Not all crane functions operate using the radio remote transmitter or crane operates intermittently.**Solutions:**

- Make sure that the function switch is working properly. If the switch is defective, simply replace it.
- Make sure that there is power going from the valve bank twin solenoid or to the function that will not operate. If no power is going to the twin solenoid, check wiring connections on wire harness plug connector for broken wires, loose connection or poor crimp. If power is going to the solenoid valve, it may not be opening to allow hydraulic oil to the function that is not operating. Check the twin solenoid for polarity, if solenoid does not magnetize, replace the twin solenoid.

Troubleshooting continued...

Problem	Possible Cause	Possible Solution
Vibrations and jerking in hydraulic cylinder during the first maneuvers.	The temperature of the hydraulic oil is too low. lack of oil in reservoir.	Perform maneuvers without loads for several minutes to warm up the oil. Add hydraulic oil.
Vibrations with every function when oil is hot.	Lack of oil in reservoir. air in hydraulic system.	Add hydraulic oil to the tank. Operate the control carrying the cylinders to stroke end several times in both directions.
All crane movements are slow, loaded and unloaded.	Suction hose from oil tank crushed or obstructed. Dump valve malfunctioning. The pump is drawing in air.	Replace or clean the suction hose. Manually override system to detect Tighten suction hose connections.
The hydraulic extension is not extending.	Bad lubrication. Wear pads are worn. Sequence valve on extension cylinder has to be adjusted.	Lubricate the wear pads Replace wear pads. Check to see if there is 12V power going to the extension function.
Crane rotation not regular	Inadequate grease. The truck is not level. Worn rotation motor. Gear bearings worn.	Grease gear bearing. Level the truck. Replace rotation motor. Replace gear.
The crane does not lift the loads on the load chart.	Defective hydraulic pump. Incorrect settings of the valves. Hydraulic cylinder seals are worn.	Replace the pump. Adjust valve settings. Replace worn seals.
The crane lifts the load, but cannot hold it.	Incorrect relief setting. Faulty holding valve. Incorrect settings of the valves. Hydraulic cylinder seals are worn.	Contact Stellar customer service for proper setting. Replace holding valve. Adjust valve settings. Replace worn seals.
Noise coming from Articulation points.	Lack of lubrication. Worn pin. Worn bushing.	Grease articulation points. Replace pin. Replace bushing.

Problem	Possible Cause	Possible Solution
Hydraulic legs do not hold under load.	Defective holding valves Worn seals in the stabilizer cylinder.	Clean or replace holding valves. Replace worn seals.
Crane does not function.	Truck battery discharged Electric connections are damaged or corroded. Control handle turned off.	Charge battery. Check electrical wiring, terminals, connections and their integrity. Turn on control handle
Crane does not function - Continued	Battery charge low. Burned fuses Dump valve not operating properly. PTO not fully engaged.	Charge transmitter battery. Replace the fuses. Bypass electrical circuit Check for full engagement.
Control box lights do not operate (green LED out)	Discharged battery. Burned fuses. Disconnected electrical cord. Corroded or loose electrical connections. Faulty manual/remote switch.	Recharge battery. Replace fuses. Join correctly the connection, replace the electric coupling. Check electrical connections. Replace switch.
A crane function does not work.	Defective switch. Faulty solenoid. Locked valve cartridge. Damaged electric connection.	Replace the switch. Replace the solenoid. Disassemble and clean the valve cartridge. Check continuity of the circuit.
Operations at high or low speed do not work.	Parameters of control box (receiver) set incorrectly or have failed.	Contact Stellar customer service department.
Controls fail to respond with control box.	Batteries dead in wireless handle. Handle on/off button isn't turned on. Manual/remote switch is in manual position.	Recharge or replace batteries in remote handle. Turn on on/off button on remote handle. Position manual/remote switch in remote position.
Operation slow down.	Hydraulic oil supply is low. Hydraulic pump is operating at a reduced speed. Relief valve is set too low. Pump or cylinder is worn.	Add hydraulic oil. Engine idle speed may be too slow, increase speed. Check relief with gauge. Replace cylinder seals.

Problem	Possible Cause	Possible Solution
Operation slow down - con't	<p>Pump is slipping due to excessive oil temperature, this is a factor which will increase with worn components.</p> <p>Filters are dirty.</p> <p>Obstruction has occurred in boom holding valve.</p>	<p>Check pump GPM with flow meter if it is suspected to be faulty.</p> <p>Replace filters.</p> <p>Replace or clean holding valve.</p>
Operation slow down - con't	Defective flow valve.	Replace valve.
Boom drifts when loaded and controls neutralized.	<p>Hydraulic oil is bypassing at piston seal.</p> <p>Main or secondary cylinder holding valves are defective or contaminated.</p>	<p>Replace cylinder.</p> <p>Clean or replace holding valves.</p>
Unusual noise in operation.	<p>Cavitation is occurring due to low hydraulic oil supply.</p> <p>Restriction or collapse of suction line has occurred.</p> <p>Suction line screen is clogged and requires replacement.</p>	<p>Add oil and cycle cylinders to get air out of system.</p> <p>Inspect suction line for damage.</p> <p>Replace or clean screen.</p>
Unusual noise in operation - con't	<p>Bypass settings on relief valve are too low.</p> <p>Relief valve is damaged.</p>	<p>Contact customer service for correct relief setting.</p> <p>Replace relief valve.</p>
Outriggers fail to retract	<p>Control valve is inoperative.</p> <p>Cylinder seals or holding valve are defective</p> <p>Hydraulic lines are restricted or ruptured.</p>	<p>If outriggers retract using manual function, it is a probable electrical problem - check continuity.</p> <p>Replace seals or holding valve.</p> <p>Inspect and replace hydraulic lines.</p>
Outriggers fail to retract-con't	Broken electrical wire going to outrigger switch to the valve bank.	Check continuity of circuit.
Outriggers yield or drift.	<p>Control valve is inoperative.</p> <p>Cylinder or check valve is defective. Hydraulic lines are restricted or ruptured.</p>	<p>Clean or replace pulsar solenoid valve. Replace holding valve.</p> <p>Check hoses for damage and replace.</p>

BMS-2 Receiver Troubleshooting

Available on some systems. Consult BMS-2 Operator Manual for details.

Problem	Probable Cause	Correction
System will not initialize after normal start-up procedure.	E-Stop reset	Push the Start button again. If the system is being initialized from an E-Stop condition, the Start button must be pressed twice - first to clear the E-Stop, then again, to start the system.
	Joystick or paddle lever not in center position.	Be sure that all joysticks and paddle levers are in center position when the Start button is activated.
	E-Stop switch engaged.	Pull out E-Stop switch. Restart system by pressing Start twice.
	Battery fully discharged.	Check battery to ensure a full charge. Replace with fully charged battery if necessary.
	No power to the receiver.	Check the diagnostic Display on the side of the receiver to be sure power is applied. Ensure that the system is securely grounded to the negative battery terminal. The Display also indicates normal transmitter communication, interference, and E-Stop conditions.
The transmitter is turned on, but does not transmit (Power LED not flashing)	Battery is discharged.	Replace battery with a fully charged battery.
	Coder board fuse.	Check fuse and replace if necessary.
	Broken key switch.	Check wiring on key switch. Replace key switch, wiring or contact element.
	Coder board failure.	Contact Hetronic or your Dealer.
Transmitter is transmitting (Power LED flashing), but crane will not respond.	E-Stop switch engaged.	Pull out the E-Stop pushbutton and press the Start/Horn pushbutton.
	Transmitter out of range.	Take the transmitter back into the range of the receiver. Press the Start/Horn pushbutton.
	Joystick, paddle lever or switch not in center position when transmitter turned on.	Ensure that all control devices are in center (neutral) position when the Start button is activated.
	Receiver power off.	Turn on power to receiver.
	Blown fuse in receiver.	Check all fuses. Replace if necessary.
	E-Stop failure in transmitter.	Check E-Stop pushbutton for damage. Check wiring to contact element for broken or disconnected wires. Repair or replace E-stop pushbutton or wiring.
	E-Stop failure in receiver. Red E-Stop LED on decoder board is illuminated.	Check wiring on E-Stop module, decoder module, E-Stop decoder module. Secure any loose connections.
All crane/machine motions operate intermittently	E-Stop module failure.	Replace E-Stop module.
	Receiver antenna loose or missing.	Tighten or replace antenna.
	External antenna (if used) has loose connection, poor grounding or interference.	Tighten antenna and ground connection. See "Connecting an External Antenna" Section for operational precautions.
	Connector wiring too close to power wiring.	Control wiring must be run separately from power wiring.
Some crane/machine motions operate intermittently	Connector inside receiver is loose.	Check all connectors, reseal if necessary.
	Crane/machine motion wiring may be loose.	Check wiring from receiver to plug and from plug to crane/machine motion actuator.
	Connector wiring too close to power wiring.	Control wiring must be run separately from power wiring.



Limited Warranty Statement

Stellar Industries, Inc. (Stellar) warrants products designed and manufactured by Stellar to be free from defects in material and workmanship under proper use and maintenance. Products must be installed and operated in accordance with Stellar's written instructions and capacities. The warranty period shall cover the following:

Twelve (12) month warranty on parts from the date recorded by Stellar as the in-service date, not to extend beyond twenty-four (24) months from date of manufacture,
Twelve (12) month repair labor from the date recorded by Stellar as the in-service date, not to extend beyond twenty-four (24) month from date of manufacture, and
Thirty-six (36) month warranty on all Stellar Crane and Hooklift structural parts from the date recorded by Stellar as the in-service date, not to extend beyond forty-eight (48) months from date of manufacture.

The in-service date will be derived from the completed warranty registration card. In the event a warranty registration card is not received by Stellar, the factory ship date will be used.

Stellar's obligation under this warranty is limited to, and the sole remedy for any such defect shall be, the repair and/or replacement (at Stellar's option) of the unaltered part and/or component in question. Stellar after-sales service personnel must be notified by telephone, fax, or letter of any warranty-applicable damage within fourteen (14) days of its occurrence. If at all possible, Stellar will ship the replacement part within 24-hours of notification by the most economical, yet expedient, means possible. Expedited freight delivery will be at the expense of the owner.

Warranty claims must be submitted and shall be processed in accordance with Stellar's established warranty claim procedure. Stellar after-sales service personnel must be contacted prior to any warranty claim. A return materials authorization (RMA) account number must be issued to the claiming party prior to the return of any warranty parts. Parts returned without prior authorization will not be recognized for warranty consideration. All damaged parts must be returned to Stellar freight prepaid; freight collect returns will be refused. Freight reimbursement of returned parts will be considered as part of the warranty claim.

Warranty service will be performed by any Stellar new equipment distributor, or by any Stellar-recognized service center authorized to service the type of product involved, or by the Stellar factory in the event of a direct sale. At the time of requesting warranty service, the owner must present evidence of date of delivery of the product. The owner shall be obligated to pay for any overtime labor requested of the servicing company by the owner, any field service call charges, and any towing and/or transportation charges associated with moving the equipment to the designated repair/service provider.

All obligations of Stellar and its authorized dealers and service providers shall be voided if someone other than an authorized Stellar dealer provides other than routine maintenance service without prior written approval from Stellar. In the case repair work is performed on a Stellar-manufactured product, original Stellar parts must be used to keep the warranty in force. The warranty may also be voided if the product is modified or altered in any way not approved, in writing, by Stellar.

The owner/operator is responsible for furnishing proof of the date of original purchase of the Stellar product in question. Warranty registration is the ultimate responsibility of the owner and may be accomplished by the completion and return of the Stellar product registration card provided with the product. If the owner is not sure of registration, he is encouraged to contact Stellar at the address below to confirm registration of the product in question. This warranty covers only defective material and workmanship. It does not cover depreciation or damage caused by normal wear and tear, accident, mishap, untrained operators, or improper or unintended use. The owner has the obligation of performing routine care and maintenance duties as stated in Stellar's written instructions, recommendations, and specifications. Any damage resulting from owner/operator failure to perform such duties shall void the coverage of this warranty. The owner will pay the cost of labor and supplies associated with routine maintenance.

The only remedies the owner has in connection with the breach or performance of any warranty on the Stellar product specified are those set above. In no event will Stellar, the Stellar distributor/dealer, or any company affiliated with Stellar be liable for business interruptions, costs of delay, or for any special, indirect, incidental, or consequential costs or damages. Such costs may include, but are not limited to, loss of time, loss of revenue, loss of use, wages, salaries, commissions, lodging, meals, towing, hydraulic fluid, or any other incidental cost.

All products purchased by Stellar from outside vendors shall be covered by the warranty offered by that respective manufacturer only. Stellar does not participate in, or obligate itself to, any such warranty.

Stellar reserves the right to make changes in design or improvement upon its products without imposing upon itself the same upon its products theretofore manufactured.

This warranty will apply to all Stellar Hooklifts, Stellar Service Trucks, & Truck-mounted Cranes shipped from Stellar's factory after July 1, 2005. The warranty is for the use of the original owner only and is not transferable without prior written permission from Stellar.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. REMEDIES UNDER THIS WARRANTY ARE LIMITED TO THE PROVISION OF MATERIAL AND SERVICES, AS SPECIFIED HEREIN. STELLAR INDUSTRIES, INC. IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Revision Date: February 2007

Document Number: 37040